

SJCAM

EMPOWER YOUR DREAMS



FUNCAM




-----01



-----18

Kameranın Bölümleri

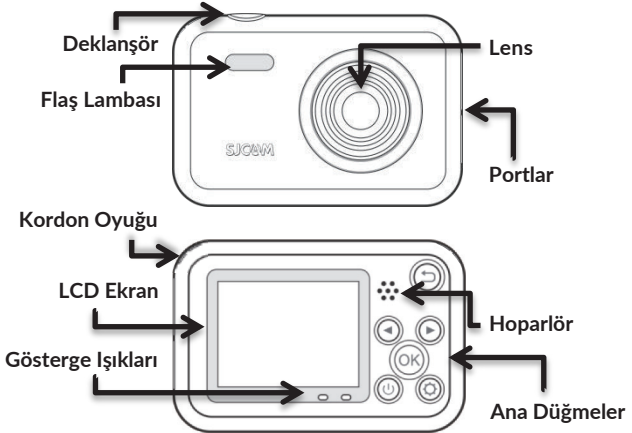

FunCam Kullanımı




3 saniye

Kamerayı alıřtırın


**Video ve fotoęraf
ekmek iin bu dğmeyi
kullanın**




Arka Yüz Düğmeleri

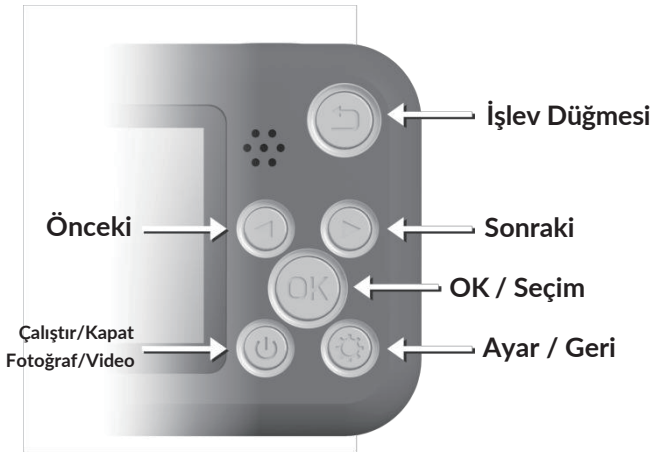


FunCam'in Şarj Edilmesi

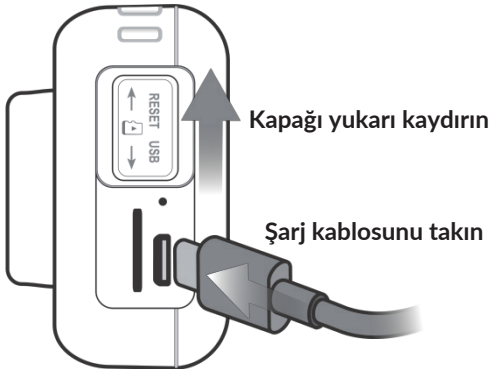

Hafıza Kartının Takılması

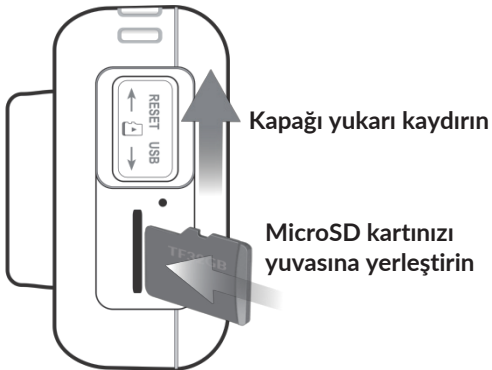


Video ya da Fotoğraf Modu Seçimi


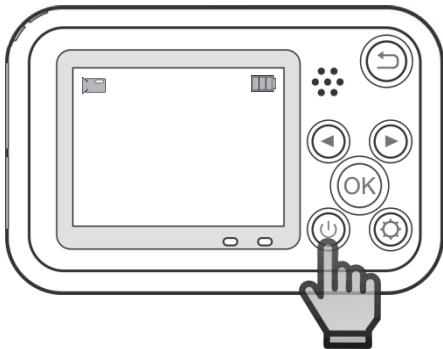


Kameranız çalışır konumda iken
⏻ düğmesine kısaca basarak video modu
ve fotoğraf modu arasından seçim yapabilirsiniz.


Ekrandaki Simgeler

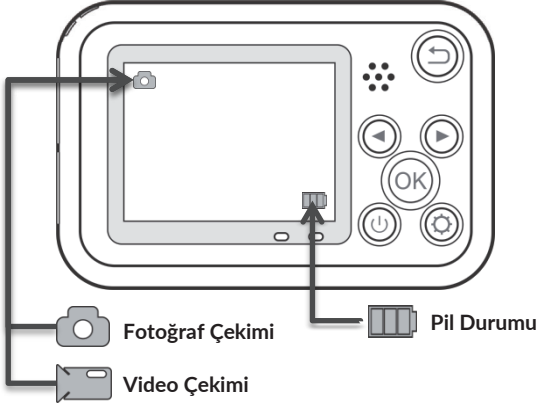

Seimler Arasında Gezinim

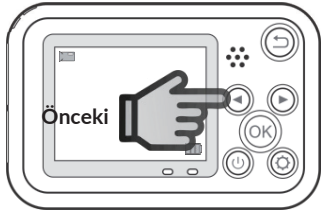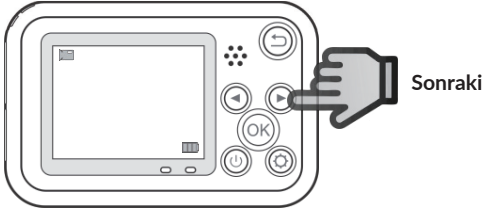


Önceki Ekranla Dönüş

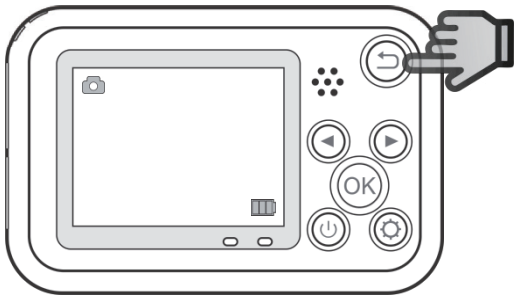

**İşlev Düğmesine basarak;
fotoğraf modu, video modu, medya kitaplığı,
küçük oyunlar, ayarlar ve diğer işlevleri seçebilirsiniz.**


Arka Fonun Deęiştirilmesi

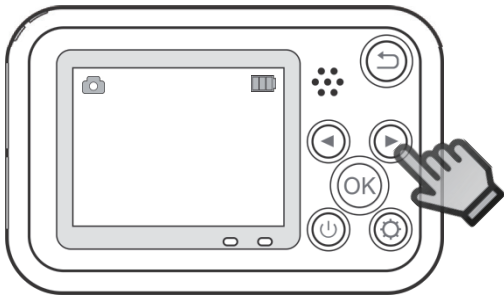

Fotoęraf modunda, Önceki ve Sonraki Düęmelerini kullanarak 24 farklı fotoęraf çıkartması seçebilirsiniz.


(Sadece Fotoęraf Modunda) ◀ ▶

Ekran Renklerinin Deęiřtirilmesi

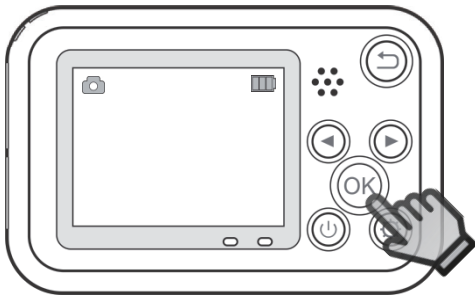


 düęmesine basarak
4 renk arasından seçim yapabilirsiniz.

Kameranın Kapatılması

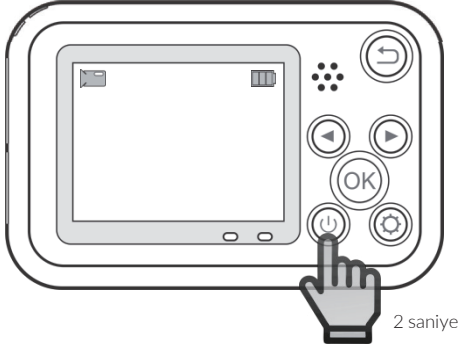

**Kamerayı kapatmak için
GÜÇ DÜĞMESİNE 2 saniye boyunca basılı tutun.**

Ayarların Deęiřtirilmesi

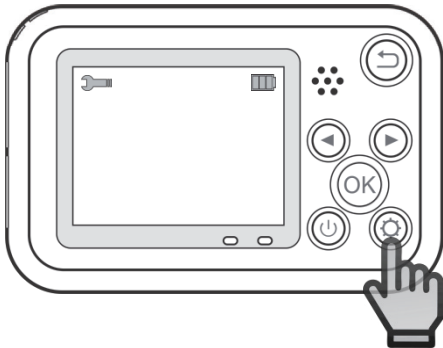



Ayar menüsüne girmek ya da yaptığınız işlemi geri almak için Ayar düğmesine (tekerlek simgesi) basın.

Yetiřkinler İin Uyarılar

1. Kullanım sırasında her zaman gvende olmaları iin ocuklara mutlaka bir yetiřkin eřlik etmelidir.
2. Su altında kullanım iin uygun deęildir, suya daldırılmamalıdır.
3. Uzun sre boyunca sıcak ortam veya doęrudan gneř iřiđına maruz kalmaktan korunmalıdır.
4. Uzun sre boyunca řarjda unutulmamalıdır. Kazaları nlemek amacıyla řarj ederken ocuklardan ve evcil hayvanlardan uzak tutulmalıdır.
5. Kullanım dıřında serin, kuru ve tozsuz yerlerde saklanmalıdır.

Güç Düğmesi

- Güç Düğmesine 2 saniye boyunca basarak kamerayı AÇIN.
- Kamera Fotoğraf modunda açılacaktır. 
- Video moduna geçmek için Güç Düğmesine tekrar basın. 
- Güç Düğmesine 2 saniye boyunca basarak kamerayı KAPATIN.

Önceki ve Sonraki Düğmeleri

- Fotoğraf modunda, Önceki ve Sonraki Düğmelerini kullanarak 24 farklı fotoğraf çıkartması seçebilirsiniz.





OK Düğmesi

- 4 farklı ekran arka plan rengi arasından seçim yapmak için OK Düğmesine basın.

İşlev Düğmesi

- İşlevler arasından seçim yapmak için girmek için İşlev Düğmesine basın.

Fotoğraf Ayarları

SEÇİM İÇİN    AYAR İÇİN  DÜĞMESİNİ KULLANIN

Çözünürlük: 12M 4032X3024 / 10M 3840X2880 /
8M 3456X2448 / 5M 2928X2256 /
3M 2400X1792 / 2M 1920X1440 / 1M 960X720

Çekim Modu: Normal, 2S Gecikmeli, 5S Gecikmeli, 10S Gecikmeli

Seri Çekim: Aç / Kapat

Tarih/Saat: Tarih ve Saat Ayarlama

Dil Seçimi: Basitleştirilmiş Çince, Geleneksel Çince, Japonca,
İngilizce, Fransızca, Almanca, Lehçe, İspanyolca,
Rusça, Romence, Çekçe





Oto. Kapanma: Kapalı, 3 Dakika, 5 Dakika, 10 Dakika

Biçimlendirme: İptal / Ok

Fabr. Ayarları: İptal / Ok


Versiyon: Geçerli Yazılım Sürümü

Video Ayarları

SEÇİM İÇİN    AYAR İÇİN  DÜĞMESİNİ KULLANIN

- Çözünürlük:** 1080P / 720P
- Döngüsel Kayıt:** Kapalı, 3 Dakika, 5 Dakika, 10 Dakika
- Zaman Atlama:** Kapalı, Düşük, Orta, Yüksek
- Tarih/Saat:** Tarih ve Saat Ayarlama
- Dil Seçimi:** Basitleştirilmiş Çince, Geleneksel Çince, Japonca, İngilizce, Fransızca, Almanca, Lehçe, İspanyolca, Rusça, Romence, Çekçe
- Oto. Kapanma:** Kapat, 3 Dakika, 5 Dakika, 10 Dakika
- Biçimlendirme:** İptal / Ok
- Fabr. Ayarları:** İptal / Ok
- Versiyon:** Geçerli Yazılım Sürümü

Parts of the camera

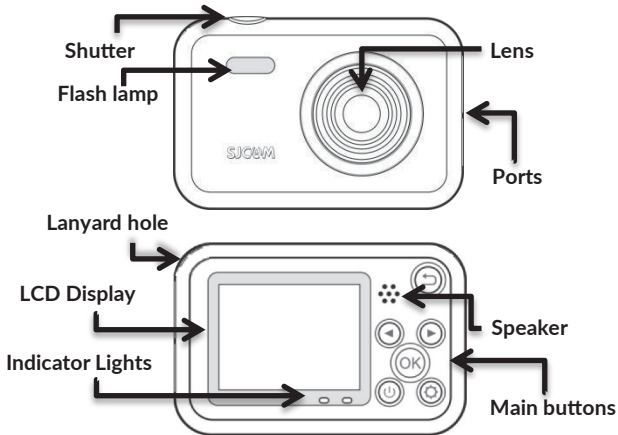

How to use FunCam



3 seconds


Turn Camera On




**Click to take
pictures and videos**




The buttons at the back

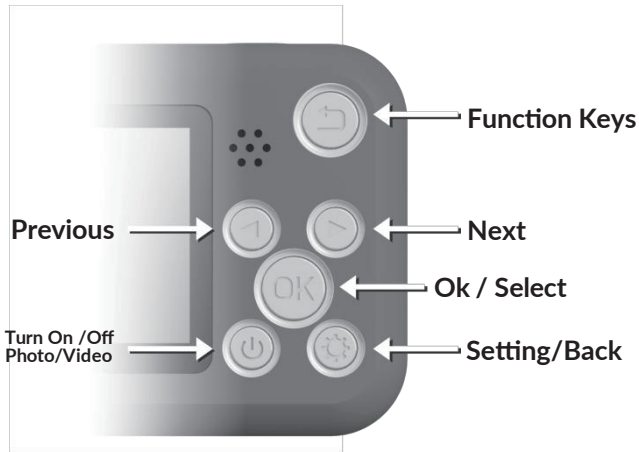


How to charge FunCam

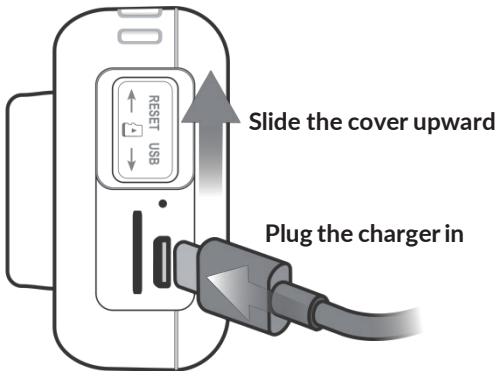


How to insert Memory Card

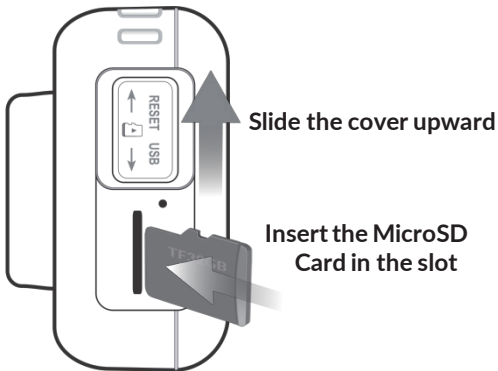


Switch to Video or Photo


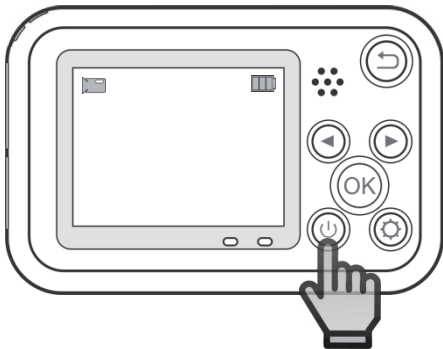


While camera is on,
Short-press  to switch camera from Photo to Video mode.
Or Video to Photo mode.


Icons on the screen

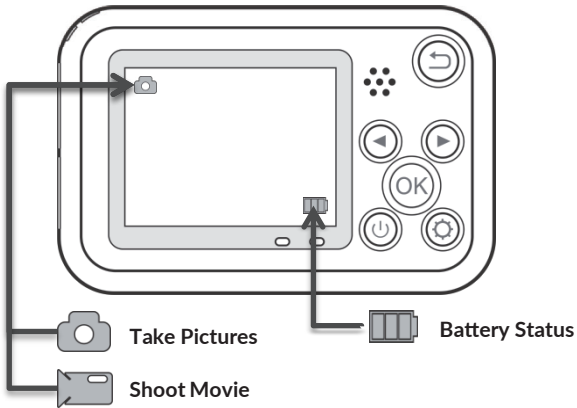

Moving around the selections

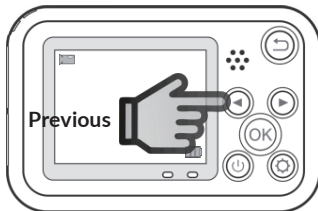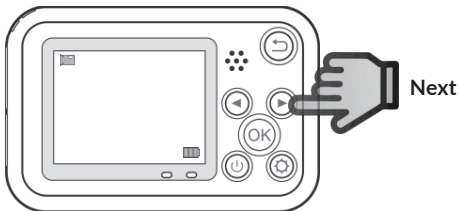


Return to previous screen

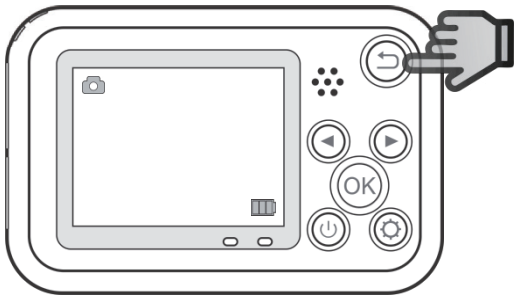

**Press to enter the function interface,
you can choose photo mode, video mode, media library,
small games, settings and other functions**


How to change backgrounds

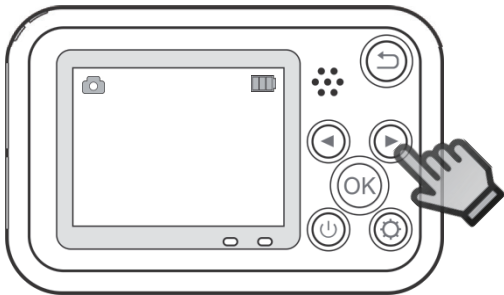


In photo mode, you can choose 24 different photo stickers by using the Previous and Next buttons


(Photo Mode only) ◀ ▶

How to change screen colors

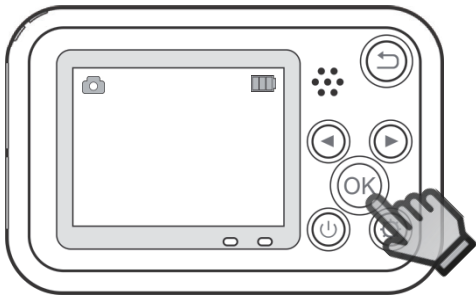


Choose from 4 image colors by pressing  .

How to turn the camera off

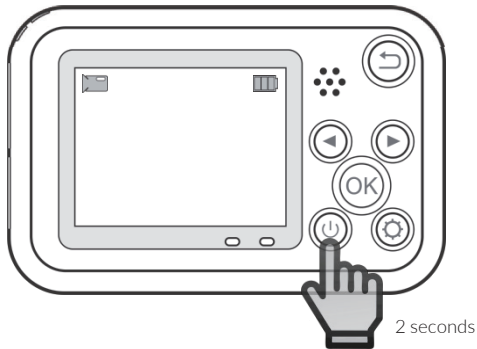

**Press POWER BUTTON for 2 seconds to
Turn off camera.**

How to change settings

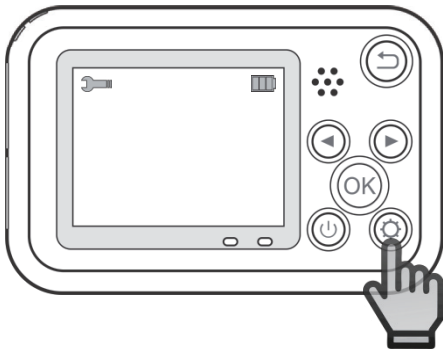



Press the setting key (wheel icon) to enter the setting interface / Click this button in the setting interface to withdraw action

This page is for grownups

1. Children must always be accompanied by a grownup to always keep them safe while operating the camera.
2. This camera is not suitable for underwater use, do not submerge.
3. Do not leave the camera in hot environments or under direct sunlight for long periods.
4. Avoid charging for long durations. Keep it away from children and pets while charging to avoid accidents.
5. Store the camera in a cool, dry, and dust-free place when not in use.

Power Button

- Turn the camera ON by pressing the Power Button for 2 seconds.
- Camera will start in Photo mode. 
- Press the Power Button again to switch to Video mode. 
- To turn camera OFF, press the Power Button again for 2 seconds.

Previous and Next Buttons

- In photo mode, you can choose 24 different photo stickers by using the Previous and Next buttons .

OK Button

- Press OK button to select 4 different screen backgrounds color.

Function button

- Press the function button to enter the function interface.

Photo Options in Menu

USE    TO NAVIGATE. THEN  TO SET.

Photo resolution: 12M 4032X3024 / 10M 3840X2880 /
8M 3456X2448 / 5M 2928X2256 /
3M 2400X1792 / 2M 1920X1440 / 1M 960X720

Capture mode: Single shot, 2S Delay, 5S Delay, 10S Delay.

Continuous shooting: On / Off .

Date/Time: set up date, time.

Language setting: Simplified Chinese, Traditional Chinese,
Japanese, English, French, German, Polish,
Spanish, Russian, Roman, Czech .

Auto Power Off: Off, 3 Mintues, 5 Mintues, 10 Mintues.

Format: Cancel / ok .

Default Setting: Cancel / ok .

Version: Display current version information.

Video Options in Menu

USE    TO NAVIGATE. THEN  TO SET.

Video resolution: 1080P ; 720P .

Cyclic resord: Off, 3 Minutes, 5 Minutes, 10 Minutes .

Time-lapse photography: Off, Low, Medium, High .

Date/Time: set up date, time .

Language setting: Simplified Chinese, Traditional Chinese,
Japanese, English, French, German, Polish,
Spanish, Russian, Roman, Czech .

Auto Power Off: Off, 3 Mintues, 5 Mintues, 10 Mintues.

Format: Cancel / ok .

Default Setting: Cancel / ok .

Version: Display current version information.

