SAMSUNG

User guide

MX-ST40F

Thank you for purchasing this Samsung product.

To receive more complete service, please register your product at www.samsung.com

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Refer to the table below for an explanation of symbols which may be on your Samsung product.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN
	This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.
	This symbol indicates that this product has included important literature concerning operation and maintenance.
	Class II product: This symbol indicates that it does not require a safety connection to electrical earth (ground). If this symbol is not present on a product with a power cord, the product MUST have a reliable connection to protective earth (ground).
~	AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.
⎓	DC voltage: This symbol indicates that the rated voltage marked with the symbol is DC voltage.
	Caution, Consult instructions for use: This symbol instructs the user to consult the user manual for further safety related information.

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not use liquid fumigators containing chemicals, such as mosquito repellent or air freshener, around the product. If steam comes in contact with the product surface or enters the product, it may cause stains or malfunction.

CAUTION

- TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.
- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

To avoid deterioration of water resistance

Check the following and use the unit correctly.

- Deformation or damage from dropping the unit or subjecting it to mechanical shock may cause deterioration of the water resistance.
- This unit does not have a design that is resistant to water pressure. Use of the unit in a location where high water pressure is applied, such as in the shower, may cause a malfunction.
- Do not pour high-temperature water or blow hot air from a hair dryer or any other appliance on the unit directly. Also never use the unit in a place subject to high temperatures, such as in a sauna or near a heat source.
- Handle the cap with care. Port cover and AC plug cover play a very important role in maintenance of the water resistance. When using the unit, make sure that the cap is closed completely. When closing the cap, be careful not to allow foreign objects inside. If the cap is not closed completely the water resistance may deteriorate and may cause a malfunction of the unit as a result of water entering the unit.
- IPX4 cannot be met when any JACK or AC power is plugged in.
- Do not lay down the product horizontally to ensure it remains water resistant.

- The Sound Tower provides durability by IPX4.

Protection against solids	IP		Protection against water
	0	4	
No requirements	X	X	No requirements
No protection	0	0	No protection
Solids > 50 mm	1	1	Vertically falling water
Solids > 12 mm	2	2	Vertically water-enclosure tilted 15°
Solids > 2.5 mm	3	3	Sprayed water 60° from vertical
Solids > 1.0 mm	4	4	Splashed water from all directions
Dust Protected	5	5	Hosing jets from all directions
Dust tight	6	6	Strong hosing jets from all directions
-		7	Temporary Immersion: 1m for 30 minutes
-		8	Immersion: manufacture defined depth and time

PRECAUTIONS

1. Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the bottom of your product. Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.
2. During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.
3. Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and cause the unit to malfunction.
4. Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Unplug the power cable from the AC wall socket if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only. Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours or until the unit has reached room temperature before using.
5. The battery used with this product contains chemicals that are harmful to the environment. Do not dispose of the battery in the general household trash. Do not expose the battery to excess heat, direct sunlight, or fire. Do not short circuit, disassemble, or overheat the battery. **CAUTION**: Danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.

Others

- As the battery is manufactured only for this product, do not use the battery for other electronic appliances or other purposes.
- When discarding a dead battery, put it into a battery collection box for recycling.
- To protect the battery, the battery cannot be charged when the temperature is lower than 3 °C or higher than 42 °C.
- When the battery level is low, recharge it. If the level of the battery remains low for a long period of time, it can cause the performance of the battery to degrade.
- Do not apply heat to the battery and do not put the battery in a fire.
- To protect the battery, the Sound Tower may not operate when the temperature is lower than -17 °C or higher than 57 °C.

CONTENTS

01 CHECKING THE COMPONENTS 1

02 PRODUCT OVERVIEW 2

Top Panel of the Sound Tower 2

Rear Panel of the Sound Tower 4

03 CONNECTING THE SOUND TOWER 7

Connecting Electrical Power 7

How to use Audio Group 8

04 CONNECTING AN EXTERNAL DEVICE 14

Connecting using an Analog Audio (AUX) Cable 14

Connecting a mobile device via Bluetooth 15

05 CONNECTING A USB STORAGE DEVICE 18

Software Update 19

Connecting an External Microphone 20

Connecting an External Guitar 21

How to use Sound Mode 22

How to use the DJ Effect 22

06 USING THE SAMSUNG SOUND TOWER APP 23

Install Samsung Sound Tower App 23

Launching the Samsung Sound Tower App 23

07 TROUBLESHOOTING 24

08 LICENSE 25

09 IMPORTANT NOTES ABOUT SERVICE 26

10 SPECIFICATIONS AND GUIDE 27

Specifications 27

01 CHECKING THE COMPONENTS

Sound Tower Main Unit

Power Cord

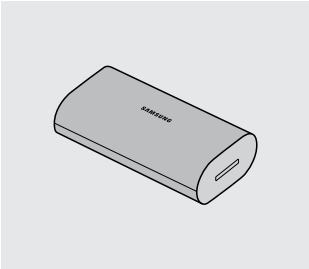

Battery

- For more information about the power supply and power consumption, refer to the label attached to the product. (Label: Rear of the Sound Tower Main Unit)
- To purchase additional components or optional cables, contact a Samsung Service Center or Samsung Customer Care.
- When moving the product, do not drag or pull the product from the ground. Lift the product when moving the product.
- Design and specifications are subject to change without prior notice.

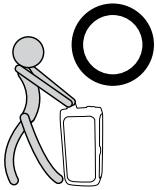



02 PRODUCT OVERVIEW

Top Panel of the Sound Tower

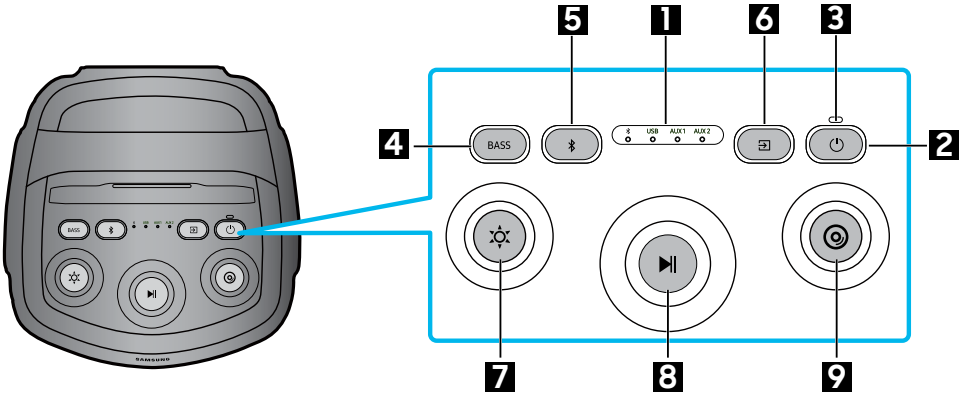

1	**LED Indicator**	Displays operating messages or current source of the Sound Tower system. The information sources represented by each LED are as follows: (Bluetooth) **USB**(USB) **AUX1**(AUX1) **AUX2**(AUX2)
2	**Power**	Turns the Sound Tower on and off.
3	**Charge LED**	Displaying battery level information of Sound Tower.
4	**BASS**	Press the **BASS** button to change the bass mode.
5	**Bluetooth PAIRING**	Press and hold the button to enter Bluetooth Pairing mode, and the LED blinks blue.
6	**Source**	Press to select a source connected to the Sound Tower.
7	**Light**	Press the **(Light)** button and the white light flashes, then rotate the button to switch between different Mood presets. • Order: Festival → Energetic → Delight → Chill → Focus → Sports → Off → Festival → Energetic → ...

8	**Play/Pause**	• **Play/Pause** Press the ▷II button to pause a music temporarily. When you press the button again, the music plays. Double press Play/Pause skips music to the next one. Press 3 times to switch to the previous one.
9	**DJ**	This button lets you Play a sampler (DJ audio effect) . Sampler (DJ audio effect) changes once rotate a jog (12 samplers) • Order: Air Horn → Whistle → Crowd Cheer → Jeering → Siren → Clap → rewind → Scratch → "No Way!" → "Are you ready" → "3,2,1" → "Ok, Let's Go" → Air Horn → ... • Play a sampler whenever change to notify what sampler is selected

Rear Panel of the Sound Tower

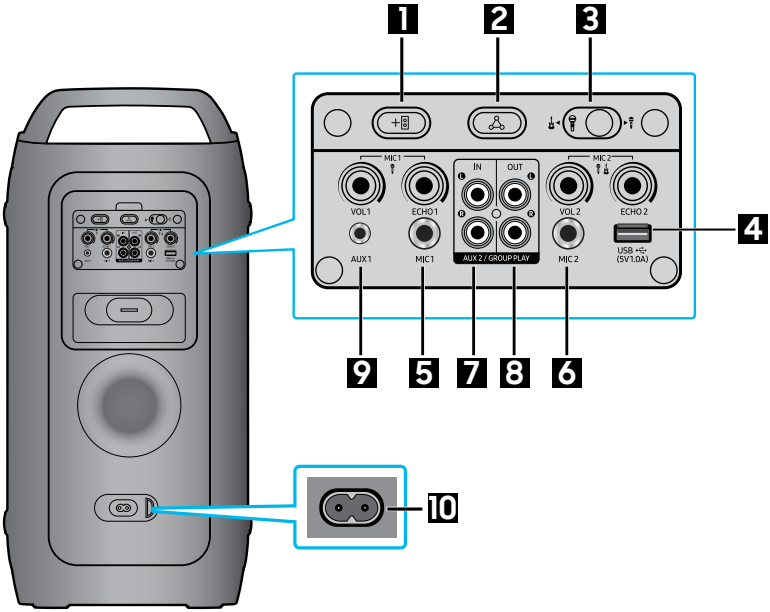

1	ADD STEREO	Press the **ADD STEREO** button to connect to another same model Sound Tower wirelessly.
2	GROUP PLAY	Press the **GROUP PLAY** button to connect up to ten Sound Tower systems wirelessly.
3	MIC2/GUITAR	Toggle the switch to **MIC2** or **GUITAR** input source.
4	USB	Connect a USB device to the **USB** ports on the main unit. If you connect your cell phone to the **USB** port, you can charge it. • Press the **(Source)** button to select **USB**.
5	MIC1	Connect your microphone to the **MIC1** jack.
6	MIC2	Connect your microphone or guitar to the **MIC2** jack.

7	**AUX2/GROUP PLAY IN Terminals**	Use an Audio Cable (not supplied) to connect **AUX2 (IN)** terminals on the main unit to Audio Out on an external analogue output device. • Be sure to match connector colours. • If the external analogue output device has only one Audio Out jack, connect either left or right. • Press the **(Source)** button to select **AUX2**. • If the product is in **AUX2** mode with no playback and no command input for more than 20 minutes, the system will turn off. • If the product is in **AUX2** mode with playback for more than 8 hours and no command input, the system will turn off.
8	**GROUP PLAY OUT Terminals**	Use an Audio Cable (not supplied) to connect **GROUP PLAY (OUT)** terminals on the main unit to Audio In on an external analog output device.
9	**AUX1**	Use an Audio (AUX) Cable (not supplied) to connect **AUX1** jack on the main unit to Audio Out on an external device. • If the product is in **AUX1** mode with no playback and no command input for more than 20 minutes, the system will turn off. • If the product is in **AUX1** mode with playback for more than 8 hours and no command input, the system will turn off.
10	**Power**	Connect the power cord to the **Power** jack and connect the other end of the power cord to a wall socket to supply electrical power to the Sound Tower.

Charge LED State of the Sound Tower:

Charging state	Charge LED
not charging and 100% ~ 31% power	Green
not charging and 30% ~ 11% power	Orange
not charging and 10% ~ 5% power	Red
Charging and full charge	Blue
Charging and 99% ~ 31% power	Green Blink
Charging and 30% ~ 11% power	Orange Blink
Charging and 10% ~ 5% power	Red Blink

※ Auto power down if battery 5%.
In DC mode shutdown, the entire system power will be turned off.

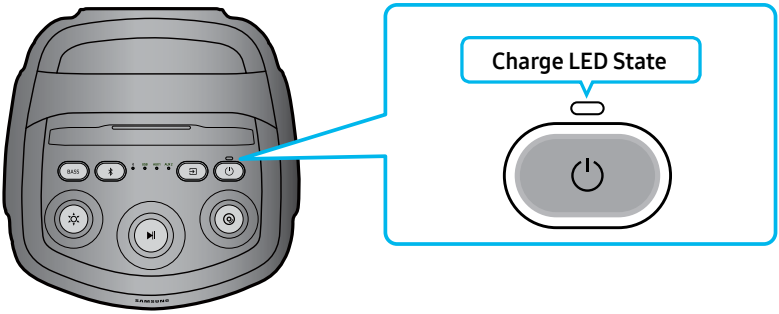

03 CONNECTING THE SOUND TOWER

Connecting Electrical Power

Use the power cord to connect the Sound Tower to an electrical outlet in the following order:
Connect the power cord to the Sound Tower and then to a wall socket.
See the illustrations below.

- **Before first use, please charge power to wake up the battery.**
- When the AC cord is pressed in, the built-in battery will be charged automatically until the battery is fully charged. The LED indicator on the top panel will show the current charging state. (refer to page ENG - 6)
- When you unplug the set to run on battery, the volume level drops dramatically.
- For more information about the required electrical power and power consumption, refer to the label attached to the product. (Label: Rear of the Sound Tower)

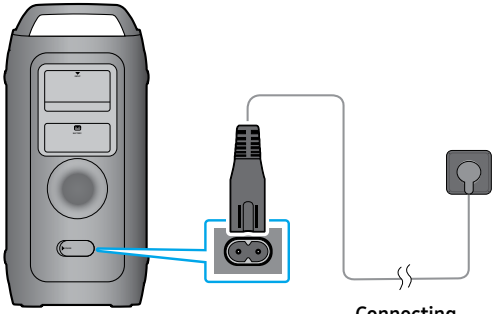

How to use Audio Group

You can connect multiple audio systems in a group to create a party environment and produce higher sound output. Set one Sound Tower as the HOST and any music played on it will be shared among any other Sound Tower systems in the Audio group.

Connecting the wired Group Play mode

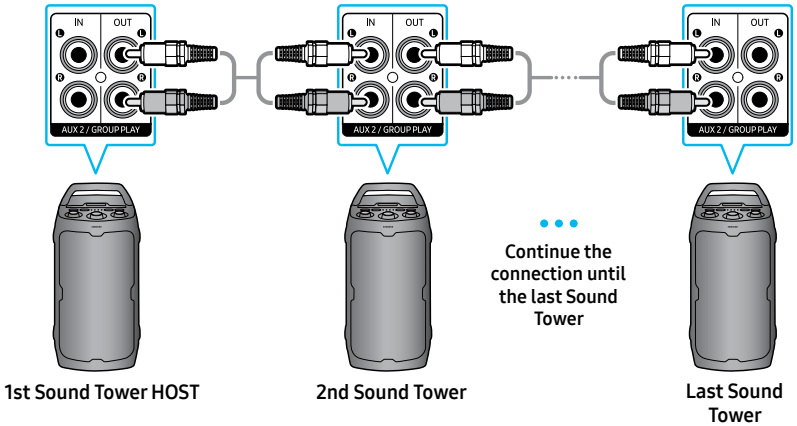

Set up Group Play by connecting all the systems using audio cables (not supplied). Use the **(Source)** button to change the source to **AUX2** for every Sound Tower system except the 1st (or HOST) Sound Tower system.
Connect the RCA cable to the **AUX2 OUT** on the HOST and **AUX2 IN** on the SUB as shown by using the RCA cable (not supplied).

NOTES

- The 1st Sound Tower HOST can play music from any source.
- Depending on the length or characteristics of the cable, there may be a difference in operating distance.

Connecting the wireless Group Play mode

To use Wireless Group Play, you can use either the **Physical Buttons** located on the back of the device or in **Samsung Sound Tower** app.

You can connect up to ten Sound Tower systems with the wireless Group Play function.

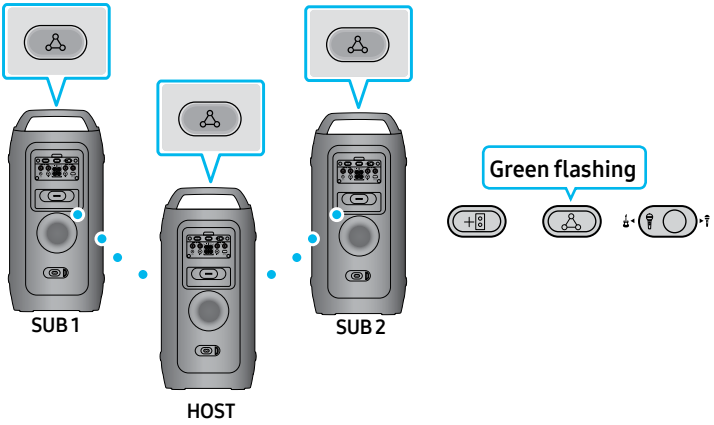

Using Physical Buttons:

1. Connect the **HOST** System:

   Press the **GROUP PLAY** button on the HOST Sound Tower system.

   After the GROUP PLAY LED slowly blinks for 10 seconds, the **GROUP PLAY** LED will blink rapidly for 30 seconds.
2. Connect the First Sub System (SUB 1):

   Press the **GROUP PLAY** button on the second Sound Tower system (SUB 1).

   The **GROUP PLAY** LED will start blinking.

   Once connected to the **HOST**, both the **GROUP PLAY** LEDs on SUB 1 and the **HOST** will stop blinking and remain lit.
3. Connect the Second Sub System (SUB 2):

   Press the **GROUP PLAY** button on the third Sound Tower system (SUB 2).

   A tone prompt will play, indicating that the **GROUP PLAY** button on the system has stopped blinking.
4. Add Additional Systems:

   If you want to add more Sound Tower systems, repeat step 3 for each additional unit.
5. Play Music:

   Play music on the **HOST** Sound Tower system.

   Sound will output from all connected systems simultaneously.

Using the Samsung Sound Tower App:

1. Download & Open the Samsung Sound Tower app on your smartphone or tablet.
2. Connect Sound Tower via Bluetooth.

3. Navigate to the Group Play settings.
4. Toggle the switch to turn Wireless Group Play on or off.

How to know which is HOST & which is SUB:

HOST - Shows "Bluetooth Button ✱ LED Light On" & Bluetooth small indicator on.
SUB - Shows only Bluetooth small indicator on. No light on Bluetooth button ✱.

NOTES

- In Group play mode, “HOST” Sound Tower can connect to the Samsung TV. After the connection is successful, the Group play mode automatically exits.
- The wireless Group Play connection is available for MX-ST50F/MX-ST40F.
- Environmental conditions or other factors with connected devices may have effect on playback quality.
- If the red LED is on the **GROUP PLAY** button, an error has occurred in the wireless Group Play connection. Try turning off and then turn on, then follow the steps from 1 to 3.
- The **ADD STEREO** button and ✱ **PAIRING** button on the SUB Sound Tower systems are not available while in wireless Group Play mode.
- The **ADD STEREO** button on the HOST Sound Tower system is not available while in wireless Group Play mode.
- Long press “**GROUP PLAY**” in Bluetooth Source state to enter Group mode as “HOST”. All SUB units must be connected one by one. For example, after HOST is connected, press **GROUP PLAY** button on SUB 1 to connect, and after SUB 1 is connected, you should connect SUB 2 and SUB 3 one by one sequentially.
- While using Group Play, currently connected Bluetooth devices are disconnected and Bluetooth connection is disabled.
- Bluetooth devices can search and connect with the HOST Sound Tower only.
- When in Group Play mode, the SUB cannot connect to a Bluetooth device.
- If the Sound Tower is powered off and then turned back on, or if a source other than Bluetooth is selected on a SUB unit while in Group Play mode, the Group Play connection will be disconnected.

Disconnecting the wireless Group Play mode

1. Press and hold the **GROUP PLAY** button over 5 seconds (HOST or SUB) after Group Play is connected or press the **GROUP PLAY** button (HOST or SUB) before Group Play is connected.
   - Tone prompt instead and the LED above the **GROUP PLAY** button is off.
2. If you select any source other than **Bluetooth** on the SUB units or turn off the HOST Sound Tower, the Group Play mode is disconnected.
   - If the disconnection is made from the HOST Sound Tower, Group Play is disconnected.

Wireless Group Play connections

1. **Connected to Smartphone:**
   - Connect smartphone via Bluetooth to HOST Sound Tower, then connect other SUB Sound Towers wireless Group play to HOST.
     - Play/Pause, audio skip, volume increase/decrease buttons on set only works on HOST Sound Tower.
     - SUB Sound Towers volume can be adjusted separately on the set.
2. **Connected to Mic/Guitar, USB, AUX:**
   - **Mic/Guitar:** When microphone or Guitar is connected on MIC 1 or MIC 2 and Group play LEDs are paired, sound only produces from the Sound Tower that it is plugged in.
   - **USB:** Wireless Stereo connection stay connected but sound only produces from the HOST Sound Tower where USB is connected.
   - **AUX:** When plugged on AUX 1 and Source on AUX 1, Sound only produces from HOST Sound Tower.

LED Indications

LED	STATE	Description
Green	Blink	Waiting for a wireless Group Play connection.
	Solid	The wireless Group Play connection was successful.
Red	Solid	There is an error with the wireless Group Play connection.

NOTE

- In wireless connection, Playback quality can be unstable depending on Bluetooth environment. For better play, please keep the device in wired Group Play mode.
- The first Bluetooth connection should be within 1m.
- The lighting colors between MAIN Sound Tower and SUB Sound Tower may vary.

Using wireless ADD Stereo Group mode

To use Wireless ADD Stereo, you can use either the **Physical Buttons** located on the back of the device or in **Samsung Sound Tower** app.

Connect two Sound Tower and use them with your Smartphone or Samsung TV to enjoy stereo sound.

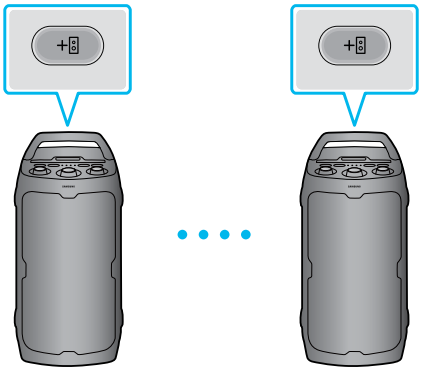

Left Sound Tower (MAIN) **Right Sound Tower (SUB)**

Using Physical Buttons:

1. Press the **ADD STEREO** button on the left Sound Tower system. The LED blinks on the **ADD STEREO** button.
2. Press the **ADD STEREO** button on the right Sound Tower system. The LED blinks on the **ADD STEREO** button.
3. When the connection is made, tone prompt. Back plane ADD LED Green Indicator Steady on.
   - The MAIN Sound Tower system outputs left channel sound and the SUB Sound Tower system outputs right channel sound. Press the **ADD STEREO** button on the MAIN or SUB Sound Tower to change the sound channel of the Sound Tower.
4. Sound is output from both Sound Tower.

Using the Samsung Sound Tower App:

1. Download & Open the Samsung Sound Tower app on your smartphone or tablet.
2. Connect Sound Tower via Bluetooth.
3. Navigate to the Stereo settings.
4. Toggle the switch to turn Wireless ADD Stereo on or off.

How to know which is HOST & which is SUB:

HOST - Shows "Bluetooth Button ✱ LED Light On" & Bluetooth small indicator on.

SUB - Shows only Bluetooth small indicator on. No light on Bluetooth button ✱.

NOTES

- To use the Stereo Group mode, both Sound Tower systems must be the same model.
- Environmental conditions or other factors with connected devices may have effect on playback quality.

- If the red LED is on the **ADD STEREO**, an error has occured in the Stereo Group connection. Turn off both Sound Tower systems, unplug them from the power source if they are connected. Then turn on & try Step 1 to 3 again. If not plugged replug them. Turn off both Sound Tower systems. Then turn on & try Step 1 to 3 again.
- **Bluetooth PAIRING** and **GROUP PLAY** on the SUB Sound Tower systems are disabled while in Stereo Group mode.
- The **GROUP PLAY** button on the MAIN Sound Tower system is not available while in Stereo Group mode.
- When ADD Stereo is connected wirelessly to Smartphone via Bluetooth: Play/Pause button on set only works with HOST Sound Tower not SUB Sound Tower.
- In mode other than "**Bluetooth**" (ex. **USB**, **AUX** mode), music is played only in MAIN Sound Tower and music is not played in SUB Sound Tower.
- If you try to connect a Bluetooth device while Stereo Group is connecting, the Stereo Group mode may fail.

Wireless Stereo connection:

1. **Connected to Smartphone:**
   - Wireless Stereo can be connected to same model Sound Towers.
   - Play/Pause, audio skip, previous audio functions are applicable to HOST Sound Tower.
   - Play/Pause is the only function supported on SUB Sound Tower.
2. **Connected to Mic/Guitar, USB, AUX:**
   - **Mic/Guitar:** Wireless Stereo connects solid green light but sound produces only on the unit that Mic/Guitar is connected to.
   - **USB:** Wireless Stereo connection stay connected but sound only produces from the HOST Sound Tower where USB is connected.
   - **AUX:** When plugged on AUX 1 and Source on AUX 1, Sound only produces from HOST Sound Tower. Only volume level can be adjusted on SUB Sound Tower.

Terminate the Stereo Group mode

Press the **ADD STEREO** button (MAIN or SUB) for at least 5 seconds while the Stereo Group is connected.

- Tone prompt and the LED above the **ADD STEREO** button is off.

LED Indications

LED	STATE	Description
Green	Blink	Waiting for a Stereo Group connection.
	Solid	The Stereo Group connection is successful.
Red	Solid	There is an error with the Stereo Group connection.

04 CONNECTING AN EXTERNAL DEVICE

Connect to an external device via a wired or wireless network to play the external device's sound through the Sound Tower.

Connecting using an Analog Audio (AUX) Cable

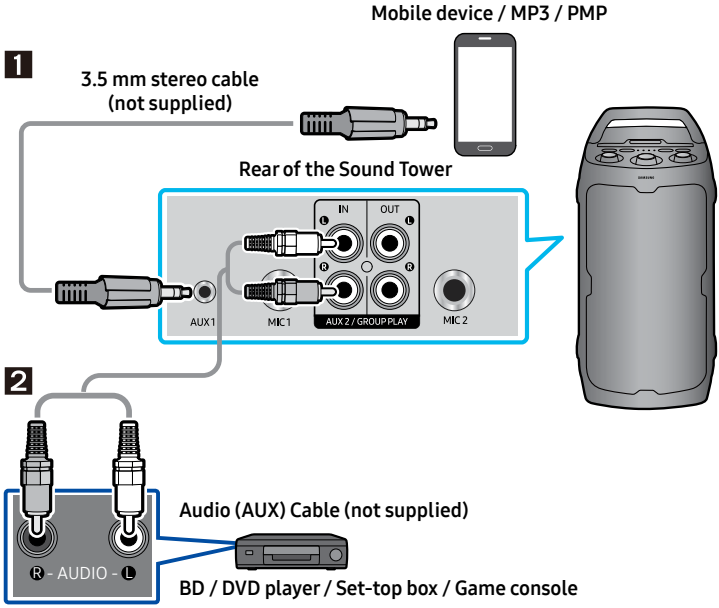

1 3.5 mm stereo Cable (AUX1)

1. Connect **AUX1** jack on the main unit to the AUDIO OUT jack of the Source Device using an 3.5 mm stereo cable.
2. Select "**AUX1**" mode by pressing the **(Source)** button on the top panel.

2 Audio Cable (AUX2)

1. Connect **AUX2 (IN)** terminals on the main unit to the AUDIO OUT terminals of the Source Device using an audio cable.
2. Select "**AUX2**" mode by pressing the **(Source)** button on the top panel.

Connecting a mobile device via Bluetooth

When a mobile device is connected using Bluetooth, you can hear stereo sound without the hassle of cabling.

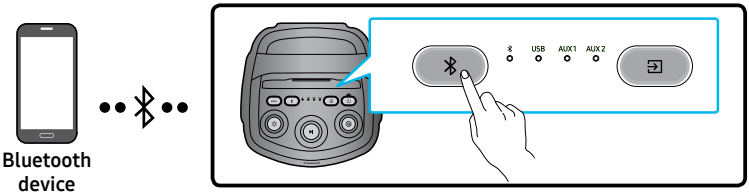

* In battery mode, when the Sound Tower is power off, Bluetooth connection and the Sound Tower APP are not available.

The initial connection

1. Press and hold the **PAIRING** button on the top panel for more than 5 seconds to enter the "**Bluetooth PAIRING**" mode.
2. On your device, select "**[AV] Sound Tower 40F**" from the list that appears.
   - After the device is connected and the Bluetooth light on the top panel is steady on.
3. Play music files from the device connected via Bluetooth through the Sound Tower.

If the device fails to connect

- Sound Tower will play prompt sound when Bluetooth disconnect.
- If a previously connected Sound Tower listing (e.g. "**[AV] Sound Tower 40F**") appears in the list, delete it.
- Then repeat steps 1 and 2.

What is the difference between Bluetooth READY and Bluetooth PAIRING?

- **Bluetooth READY**: In this mode, you can use the previously connected TV or mobile device to connect to Sound Tower.
- **Bluetooth PAIRING**: In this mode, you can connect a new device to the Sound Tower. (hold down the **PAIRING** button on the panel for more than 5 seconds to enter the **PAIRING** state.)

Bluetooth Multi connection

Sound Tower supports up-to two simultaneous Bluetooth device connections. Sound Tower can play music through one of the connected Bluetooth devices without disconnecting the second device.

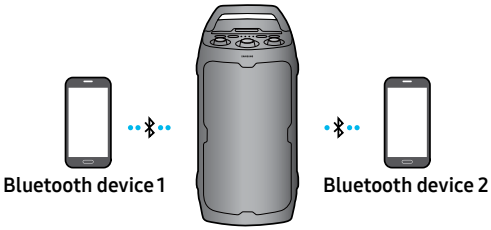

1. Connect Sound Tower to the first device and the second device respectively for the first time. (See ENG - 15)
2. Music can be played on only one of the two connected devices, and when the music is played on the other device, the music on the playing device is paused.

NOTES

- If you want to connect Sound Tower to a third device, you can disconnect Sound Tower from one of the two currently connected devices and then connect Sound Tower to the third device. (Multi connection would not work on Samsung TVs.)
- With the Sound Tower and two devices currently connected, when pairing to a new Bluetooth device, the devices currently connected should be disconnected.
- You can connect to two Bluetooth devices at the same time.
- Environmental conditions or other factors with connected devices may have effect on playback quality.
- The Sound Tower automatically turns off after 18 minutes with no command input in the ready state.
- The Sound Tower may not perform Bluetooth search or connection correctly under the following circumstances:
  - If there is a strong electrical field around the Sound Tower.
  - If several Bluetooth devices are simultaneously paired with the Sound Tower.
  - If the Bluetooth device is turned off, not in place, or malfunctions.
- Electronic devices may cause radio interference. Devices that generate electromagnetic waves must be kept away from the Sound Tower main unit - e.g., microwaves, wireless LAN devices, etc.

- Bluetooth Multi connection may not be supported depending on the connected device's specifications.
- Removable/detachable Bluetooth devices such as Dongles, Adapters, etc. used on Smartphones, laptops, TVs, etc. do not support Bluetooth Multi connection.
- After Bluetooth Multi connection pairing, there may be a slight delay before music starts playing depending on the Bluetooth devices.
- If you move too far out of range from the Sound Tower without first disconnecting your Bluetooth device, it may take a few minutes to connect other Bluetooth devices. If you turn the Sound Tower off and back on, you can connect other Bluetooth devices without waiting.

LED Indications

LED	STATE	Description
Blue	Fast Blink	Bluetooth PAIRING mode
	Blink	Bluetooth READY mode
	Solid	A Bluetooth device is connected.

Using Bluetooth Power On

When the Sound Tower is turned off, you can connect your smart device via a Bluetooth connection to turn it on. Battery status cannot use Bluetooth power on.

1. Press and hold the **BASS** button on the top panel to set the Bluetooth Power On function on. Lighting bar will be blink white once.
   - Only works when Sound Tower is plugged into power - cannot wake up Sound Tower with Bluetooth when unplugged from outlet.
2. When the Sound Tower is off, connect your smart device via Bluetooth. (For information on Bluetooth connections, refer to your smart device's manual.)
3. When the connection is complete, the Sound Tower turns itself on automatically in Bluetooth mode.
   - Select the desired music to play from your smart device.

NOTE

- Each time you press and hold the **BASS** button for 5 seconds. LED lighting bar will be blink white once and status switched:
  BLUETOOTH POWER-ON → BLUETOOTH POWER-OFF

05 CONNECTING A USB STORAGE DEVICE

You can play music files located on USB storage device through the Sound Tower.

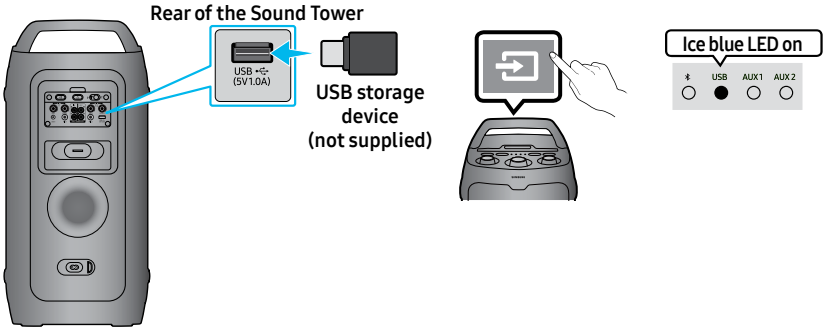

1. Connect a USB storage device to the USB port on your Sound Tower.
2. Press the **(Source)** button on the top panel and then select "**USB**".
3. The second **USB** indicator on the top panel is steady on.
4. Play music files from the USB storage device through the Sound Tower.
   - The Sound Tower automatically turns off (Auto Power Down) if USB device is not connected, playback stopped, or there is no input for more than 18 minutes.
   - Music skips when (Play/Pause) button is pressed twice on set. Press 3 times to switch to the previous song.

NOTES

- This product only supports USB storage devices that are formatted in the FAT and FAT32 file system.
- A maximum of 2000 files can be played per USB storage device.
- A maximum of 200 folders can be read per USB storage device.

Supported Audio Formats

Extension	CODEC	Sampling Rate	Bitrate
*.mp3	MPEG1 Layer2	32KHz ~ 48KHz	32Kbps ~ 320Kbps
	MPEG1 Layer3	32KHz ~ 48KHz	32Kbps ~ 320Kbps
	MPEG2 Layer3	16KHz ~ 24KHz	8Kbps ~ 160Kbps
	MPEG2.5 Layer3	8KHz ~ 12KHz	8Kbps ~ 160Kbps
*.wav	LPCM	32KHz ~ 192KHz	1,024Kbps ~ 9,216Kbps
*.aac	AAC-LC (MPEG2/MPEG4)	32KHz ~ 48KHz	32Kbps ~ 320Kbps
*.flac	FLAC	32KHz ~ 192KHz	162Kbps ~ 8,100Kbps

NOTES

- The above table shows supported sampling rates and bit rates. Files in formats that are not supported will not play.
- 32-bit data size is not supported.

Software Update

Samsung may offer updates for the Sound Tower's system firmware in the future.

If an update is offered, you can update the firmware by connecting a USB device with the firmware update stored on it to the **USB** port on your Sound Tower. For more information about how to download update files, go to the Samsung Electronics website at www.samsung.com → support. Then, enter or select the model number of your Sound Tower, select the Software & Apps option, and then Downloads. Note that the option names can vary.

If the upgrade takes more than 10 minutes, it means the upgrade process is stuck. Please press and hold the Power button on the top panel for 10 seconds and wait 1 minute. Press the Power button again to start the device and operate it to re-upgrade via USB. Then, wait until the upgrade is complete. (Reset upgrade only supports FAT format)

Software upgrades can also be performed by using the APP.

Connecting an External Microphone

You can output your voice from the system by connecting a dynamic microphone with a normal plug (not supplied).

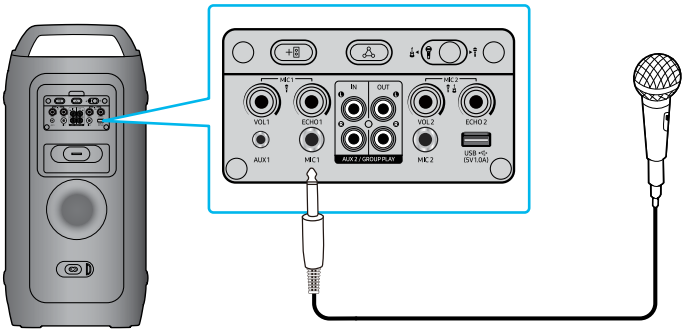

1. Turn the MIC LEVEL knob to MIN to reduce the microphone volume level.
2. Connect an optional microphone to the MIC jack on the unit.
3. Adjust the volume using the MIC “VOL” knob.
4. Adjust the Effect of the echo using the MIC “ECHO” knob.
5. Speak or sing into the connected microphone.

NOTES

- When using the wireless Group Play or Stereo mode, the audio from the microphone connected to the Host or Sub system will be output only on Sound Tower that it is plugged in. In contrast, microphones connected to Sub systems will only be heard on their respective systems.
- When Sound Tower is in battery mode, the MIC sound level will be lower.
- Toggle the switch to MIC 2 or GUITAR input source (Volume is lower compared on Microphone source).

Connecting an External Guitar

You can output your voice from the system by connecting a Guitar with a normal plug (not supplied).

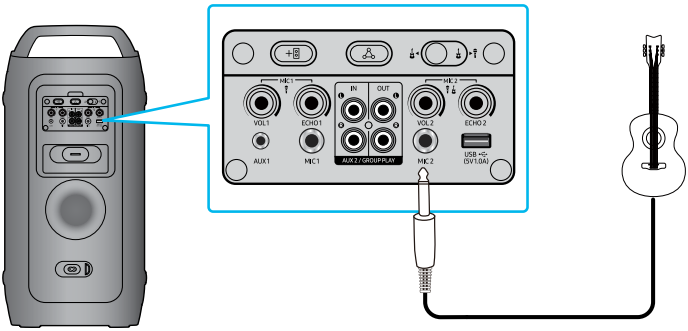

1. Turn the MIC LEVEL knob to MIN to reduce the Guitar volume level.
2. Connect an optional Guitar to the MIC 2 jack on the unit.
3. Adjust the volume using the MIC 2 “VOL” knob.
4. Play into the connected guitar.

NOTES

- When using the wireless Group Play or Stereo mode, the audio from the guitar connected to the Host or Sub system will be output only on Sound Tower that it is plugged in. In contrast, Guitar connected to Sub systems will only be heard on their respective systems.
- When Sound Tower is in battery mode, the Guitar sound level will be lower.

How to use Sound Mode

Your Sound Tower provides predefined equalizer settings that are optimized for particular music genres.

1. Press the **SOUND MODE** on the APP.
2. Each time you change the **SOUND MODE**, the Sound Tower cycles through the available sound effects: **Standard, Wide, Stadium, Outdoor**.

NOTES

- Default sound mode is **Standard**.
- When turned off, press and hold the ▷II button on product for more than 5 seconds to turn on in the default Sound Mode setting.

How to use the DJ Effect

The DJ Effect function lets you add DJ sound effects to your music. The level of each effect is adjustable.

- Users can slide in APP to change effect and value, and the range is between 0 and 3.

NOTE

- When turned off, press and hold the ▷II button on product for more than 5 seconds to turn on in the default DJ Effect setting.

06 USING THE SAMSUNG SOUND TOWER APP

Install Samsung Sound Tower App

To control this product with your Smart Device and the Samsung Sound Tower app, download the Samsung Sound Tower App from the Google Play Store or Apple App Store, and install it on your Smart Device.

NOTES

- The Samsung Sound Tower app is compatible with Android mobile phone devices running Android OS 6.0 or later.
- The Samsung Sound Tower app is compatible with Apple mobile devices running iOS 13.0 or later.

Market search: Samsung Sound Tower

GET IT ON Google Play

Download on the App Store

Launching the Samsung Sound Tower App

To launch and use the Samsung Sound Tower app, touch the Samsung Sound Tower icon on your smart device, and then follow the directions on the screen.

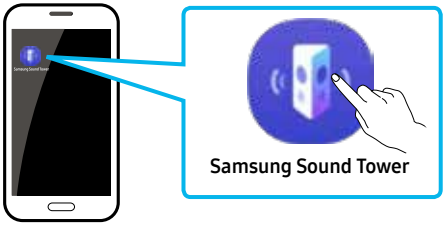

07 TROUBLESHOOTING

Before seeking assistance, check the following.

The unit will not turn on.

→ The battery may be fully discharged. Please connect the power plug and try to turn it on

A function does not work when the button is pressed.

→ After removing the power plug, turn off the Sound Tower. And insert power plug again, turn on the Sound Tower.
→ Power cycle the external device and try again.
→ If there is no signal, the Sound Tower automatically turns off after a certain period of time. Turn on the power.

Sound dropouts occur in Bluetooth mode.

→ See the Bluetooth connection sections on ENG - 15.

Sound is not produced.

Is the volume set to minimum?
→ Adjust the Volume.

Stereo Group connection is not working.

Is the system in wireless Group Play mode?
→ Disconnect the wireless Group Play mode and try Stereo Group connection again.

It cannot make a Bluetooth connection.

Is the system connected to another system in wireless Group Play mode or Stereo Group mode?
→ Try Bluetooth connection again after disconnecting the wireless Group Play or Stereo Group connection.

Are the two Bluetooth devices already connected?
→ Try Bluetooth connection again after disconnecting other Bluetooth connections.

The ✱ PAIRING button is not working.

Is the system in wireless Group Play mode or Stereo Group mode?
→ Try again after disconnecting the wireless Group Play or Stereo Group connection.

I want to switch the HOST system to the other in wireless Group Play or Stereo Group connection.

→ Long press Group button 5 seconds, and after it use Group LED to judge instead connect the others one by one.
→ With Stereo Group mode, HOST is fixed. You can not change others as HOST.

It cannot make a “Wireless/Wired Group/ Add Stereo/Bluetooth” connection.

Test after Turn off/on Sound Tower.
Hard reset Sound Tower.
Is the distance between systems too far?

→ It is recommended to make a “Wireless/ Wired Group/Add Stereo/Bluetooth” pairing within 1 meter from the system.
→ The recommended operating distance between Sound Tower systems is closer than 10 meters.

Sound Tower not turning on when attempting to wake up via Bluetooth.

→ The Auto Bluetooth Turn-On feature is only functional when the unit is connected to a power source.

Customer Reset does not work.

→ Customer Reset does not work in DC Mode. Please connect the AC cord to operate the Customer Reset.

08 LICENSE

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The Auracast™ word mark and logos are trademarks owned by the Bluetooth SIG. Any use of such marks by Samsung Electronics Co., Ltd. is under license Other trademarks and trade names are those of their respective owners.
* Group Play with Auracast™ controls each Sound Tower individually for ST40F and ST50F only. In wireless connection, playback quality may be unstable depending on Bluetooth® environments.

Please visit www.samsung.com/global/ecodesign_energy to find futher information about off mode, standby mode, and networked standby mode associated with EU standby ecodesign regulation.

Open Source License Notice
Open Source used in this product can be found on the following webpage (http://opensource.samsung.com).

09 IMPORTANT NOTES ABOUT SERVICE

- Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.
- An administration fee may be charged if either
  (a) an engineer is called out at your request and there is no defect with the product (i.e. where the user manual has not been read).
  (b) you bring the unit to a repair centre and there is no defect with the product (i.e. where the user manual has not been read).
- You will be informed of the administration fee amount before a technician visits.

10 SPECIFICATIONS AND GUIDE

Specifications

Model Name		MX-ST40F
USB		5 V/1.0 A
Weight		12.73 kg
Dimensions (W x H x D)		303.0×620.0×310.0 mm
Operating Temperature Range		+5 °C to +35 °C
Operating Humidity Range		10 % ~ 75 %
Overall Power Consumption		40 W
AMPLIFIER Max Output Power		Power cord plug-in 160 W
		Battery 80 W
Battery Type		Lithium-ion 33.48 Wh
Battery play time		up to 12 hrs
Battery charge time		<3.5 hrs
Li-ion Rechargeable Battery	Battery Model	B3672CMS_FSC, 2INR22/71
	Nominal Voltage	7.2 V ⎓
	Rated Capacity	4650 mAh, 33.48 Wh
	Limited Charge Voltage	8.3 V ⎓
	Typical Capacity	4700 mAh, 33.84 Wh
Overall Standby Power Consumption (W)		2.0 W
Bluetooth Port deactivation method		Press and hold the **BASS** button for more than 5 seconds to turn off Bluetooth Power function.

NOTES

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- Battery Play time and Battery charge time vary with use conditions.
- In an extremely cold or hot environment, charging stops for safety. To resolve these issues, disconnect the AC power cord and connect it again in an operating temperature between 5°C and 35°C.
- Hereby, Samsung declares that this radio equipment is in compliance with Directive 2014/53/EU and the relevant UK statutory requirements. The full text of the declaration of conformity is available at the following internet address: http://www.samsung.com go to Support and enter the model name. This equipment may be operated in all EU countries and in the UK.

- **WIRELESS DEVICE OUTPUT POWER**
  Bluetooth max transmitter power
  100 mW at 2.4 GHz - 2.4835 GHz

[Correct disposal of batteries in this product]

(Applicable in countries with separate collection systems)
This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.
If batteries are not properly disposed of, these substances can cause harm to human health or the environment.
To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)
This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.
Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.
Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For information on Samsung's environmental commitments and product specific regulatory obligations e.g. REACH, WEEE, Batteries, visit:
www.samsung.com/uk/aboutsamsung/sustainability/environment/our-commitment/data/

GÜVENLİK BİLGİLERİ

GÜVENLİK UYARILARI

ELEKTRİK ÇARPMA RİSKİNİ AZLATMAK İÇİN KAPAĞI (YA DA ARKA KISMI) SÖKMEYİN. ÜRÜN İÇİNDE KULLANICI TARAFINDAN TAMİR EDİLEBİLECEK BİR PARÇA BULUNMAMAKTADIR. SERVİS İŞLEMLERİNİ, YETKİN SERVİS PERSONELİNE BIRAKIN.

Samsung ürününüzde bulunabilecek sembollerin açıklaması için aşağıdaki tabloya bakın.

	DİKKAT **ELEKTRİK ÇARPMA RİSKİ AÇMAYIN**
	Bu sembol, içinde yüksek voltaj olduğunu gösterir. Bu ürünün içindeki parçalarla herhangi bir temasta bulunmak tehlikelidir.
	Bu sembol, bu ürünle çalışma ve bakıma ilişkin önemli literatür verildiğini gösterir.
	Sınıf II ürün: Bu sembol, elektrik topraklamasına (toprak) bir güvenlik bağlantısı gerekmediğini gösterir. Güç kablolu bir üründe bu sembol bulunmuyorsa, ürünün koruyucu topraklamaya (toprak) güvenilir bir bağlantısı OLMALIDIR.
~	AC voltajı: Bu sembol, sembolle işaretlenen nominal voltajın AC voltajı olduğunu gösterir.
⎓	DC voltajı: Bu sembol, sembolle işaretlenen nominal voltajın DC voltajı olduğunu gösterir.
	Dikkat, Kullanım talimatlarına bakın: Bu sembol, kullanıcıya güvenlikle ilgili daha fazla bilgi için kullanıcı kılavuzuna başvurmasını söyler.

UYARI

- Yangın ya da elektrik çarpması riskini azaltmak için cihazın, su veya neme maruz kalmasına izin vermeyin.
- Bu ürün Kaliforniya Eyaleti tarafından kansere ve doğum kusurlarına veya üreme bozukluklarına yol açtığı kabul edilen kimyasallar içerir.
- Pil (pil veya piller ya da pil takımı) güneş ışığı, ateş veya benzeri aşırı ısıya maruz bırakılmamalıdır.
- Ürünün çevresinde sinek kovucu gibi böcek ilaçları veya oda spreyi gibi kimyasallar içeren sıvı püskürtücü ürünler kullanmayın. Buharın ürün yüzeyine temas etmesi veya ürüne girmesi, lekelere ya da arızalara neden olabilir.

DİKKAT

- ELEKTRİK ÇARPMASINI ENGELLEMEK İÇİN FİŞİN GENİŞ UCUNU YUVAYLA EŞLEŞTİRİN VE YERİNE TAM OTURTUN.
- Bu cihaz, koruyucu topraklama bağlantısına sahip bir AC prizine takılmalıdır.
- Cihazın şebeke bağlantısını kesmek için, fişi şebeke soketinden çekilmelidir; dolayısıyla şebeke fişi uygun bir yerde olmalıdır.
- Bu cihaza sıvı damlatılmamalı veya dökülmemelidir. Vazo gibi sıvı dolu nesneler cihazın üstüne konulmamalıdır.
- Bu cihazı tamamen kapatmak için güç fişini duvardaki prizden çıkarmanız gerekir. Dolayısıyla, güç fişi her zaman hızla ve kolayca erişilebilir bir noktada olmalıdır.

Suya dayanıklılığın bozulmaması için

Aşağıdaki maddeleri kontrol edip üniteyi doğru şekilde kullanın.

- Ünitenin düşürülerek veya mekanik darbeye maruz bırakılarak deforme olması ya da hasar görmesi sonucunda suya dayanıklılığı bozulabilir.
- Bu ünite su basıncına dayanacak şekilde tasarlanmamıştır. Bu ünitenin yüksek su basıncı uygulanan bir yerde (ör. duşta) kullanılması arızaya neden olabilir.
- Ünitenin üzerine doğrudan yüksek sıcaklıkta su dökmeyin veya saç kurutma makinesi ya da başka bir cihazdan çıkan sıcak havayı üflemeyin. Ayrıca üniteyi yüksek sıcaklıklara maruz kalacağı sauna içinde veya ısı kaynağına yakın yerlerde asla kullanmayın.
- Kapağı dikkatli tutun. Port kapağı ve AC fiş kapağı suya dayanıklılığın korunması açısından çok önemli bir role sahiptir. Üniteyi kullanırken kapağın tamamen kapalı olduğundan emin olun. Kapağı kapatırken yabancı cisimlerin içeri kaçmamasına dikkat edin. Kapak tam kapanmazsa suya dayanıklılık bozulabilir ve ünitenin içine su girdiğinde arızaya neden olabilir.
- JACK veya AC güç takılı iken IPX4 sağlanamaz.
- Ürünün suya dayanıklı kalabilmesi için ürünü yatay yönde yatırmayın.

- Sound Tower, IPX4'e göre dayanıklılık sağlar.

Katılara karşı koruma	IP		Suya karşı koruma
	0	4	
Gereklilik yok	X	X	Gereklilik yok
Koruma yok	0	0	Koruma yok
Katılar > 50 mm	1	1	Dikey yönde düşen su
Katılar > 12 mm	2	2	Su muhafazası dikey yönde 15° eğik
Katılar > 2,5 mm	3	3	Dikey yönde 60° açıyla sıçrayan su
Katılar > 1,0 mm	4	4	Her yönden sıçrayan su
Toz Korumalı	5	5	Her yönden hortum jetleri
Toz geçirmez	6	6	Her yönden güçlü hortum jetleri
-		7	Geçici Daldırma: 30 dakika 1 m
-		8	Daldırma: üreticinin tanımladığı derinlik ve süre

ÖNLEMLER

1. Evinizdeki AC güç kaynağının, ürününüzün altında bulunan kimlik etiketinde listelenen güç gereksinimlerine uyduğundan emin olun. Havalandırma deliklerinin kapatılmadığından emin olun. Ürünü amplifikatörlerin veya ısınma yapabilecek diğer ekipmanların üzerine koymayın. Bu ünite çalar sürekli kullanım için tasarlanmıştır. Üniteyi tamamen kapatmak için AC fişini duvardaki prizden çıkarın. Eğer üniteyi uzun bir süre kullanmayacaksanız fişini prizden çıkarın.
2. Fırtınalı havalarda AC ana fişi, prizden çıkarın. Yıldırım nedeniyle oluşan gerilim tepe değerleri üniteye zarar verebilir.
3. Üniteyi doğrudan güneş ışığı ya da diğer ısı kaynaklarına maruz bırakmayın. Bu, cihazın aşırı ısınmasına ve arızalanmasına yol açabilir.
4. Ürünü, neme (örneğin, vazo) ve aşırı ısınmaya (örneğin, şömine) ya da güçlü manyetik ya da elektriksel alan oluşturan ekipmanlara karşı koruyun. Ünitenin hatalı çalışması durumunda güç kablosunu AC kaynağından çıkarın. Bu ürün, endüstriyel kullanım için tasarlanmamıştır. Bu ürün sadece kişisel kullanım içindir. Ürün veya diskini, soğuk sıcaklıklarda depolanmışsa yoğuşma meydana gelebilir. Kış şartlarında ünitenin taşınması durumunda kullanmadan önce ünite oda sıcaklığına gelene kadar yaklaşık 2 saat bekleyin.
5. Bu ürünle kullanılan piller, çevreye zarar veren kimyasal maddeler içermektedir. Pilleri, normal ev çöpüne atmayın. Pilleri ateşe atmayın. Pillere kısa devre yaptırmayın, içini açmayın veya aşırı ısıtmayın.
   DİKKAT: Pil düzgün şekilde değiştirilmediği takdirde patlama riski. Yalnızca aynı tiple veya eşdeğer tiple değiştirin.

Diğerleri

- Pil yalnızca bu ürüne özel üretildiğinden, pili başka elektronik cihazlar veya başka amaçlar için kullanmayın.
- Bitmiş pili atacağınız zaman geri dönüşüm için pil toplama kutusuna atın.
- Pili korumak için sıcaklık 3 °C'nin altında ya da 42 °C'nin üstündeyken pil şarj edilemez.
- Pil seviyesi düşükse pili şarj edin. Pil seviyesi uzun süre düşük kalırsa pil performansının düşmesine sebep olabilir.
- Pile ısı uygulamayın ve pili ateşe atmayın.
- Pili korumak için Sound Tower sıcaklık -17 °C'nin altında ya da 57 °C'nin üstündeyken çalıştırılamaz.

İÇİNDEKİLER

01 BİLEŞENLERİ KONTROL ETME 1

02 ÜRÜNE GENEL BAKIŞ 2

Sound Tower Üst Paneli 2

Sound Tower Arka Paneli 4

03 SOUND TOWER'I BAĞLAMA 7

Elektrik Gücünü Bağlama 7

Ses Grubunun Kullanımı 8

04 DIŞ CİHAZ BAĞLAMA 14

Analog Ses (AUX) Kablosu kullanarak bağlama 14

Bluetooth ile mobil cihaz bağlama 15

05 USB DEPOLAMA CİHAZI BAĞLAMA 18

Yazılım Güncellemesi 19

Dış Mikrofon Bağlama 20

Dış Gitar Bağlama 21

Ses Modunun Kullanımı 22

DJ Efektinin Kullanımı 22

06 SAMSUNG SOUND TOWER APP'İN KULLANIMI 23

Samsung Sound Tower App'i Yükleme 23

Samsung Sound Tower App'i Başlatma 23

07 SORUN GİDERME 24

08 LİSANS 25

09 HİZMET HAKKINDA ÖNEMLİ NOT 26

10 TEKNİK ÖZELLİKLER VE KILAVUZ 27

Teknik Özellikler 27

01 BİLEŞENLERİ KONTROL ETME

Sound Tower Ana Ünitesi

Güç Kablosu

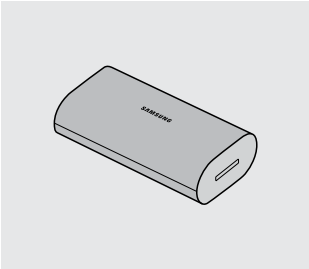

Pil

- Güç kaynağı ve güç tüketimi hakkında daha fazla bilgi için ürüne yapıştırılan etikete bakın. (Etiket: Sound Tower Ana Ünitesinin Arkasında)
- Ek bileşen veya opsiyonel kablo satın almak için Samsung Servis Merkezi veya Samsung Müşteri Hizmetleri ile iletişime geçin.
- Ürünü taşırken yerde sürüklemeyin veya çekmeyin. Ürünü taşırken kaldırın.
- Tasarım ve teknik özellikler önceden bildirilmeksizin değiştirilebilir.

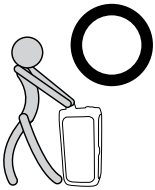



02 ÜRÜNE GENEL BAKIŞ

Sound Tower Üst Paneli

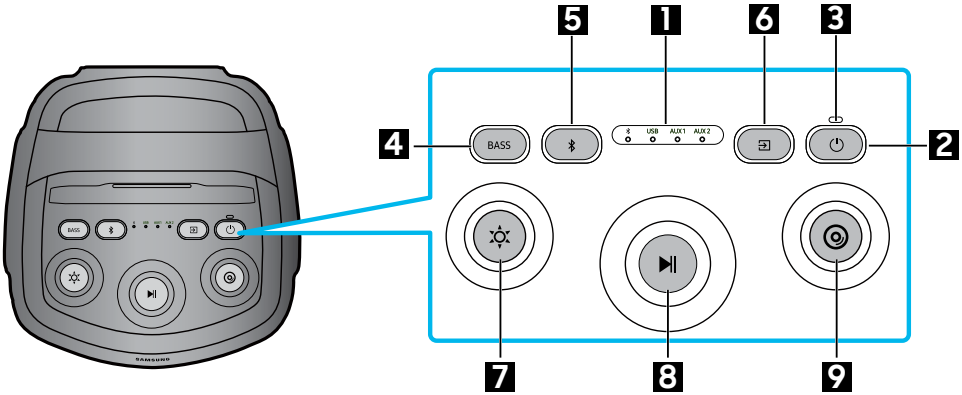

1	**LED Gösterge**	Sound Tower sisteminin işlem mesajlarını veya mevcut kaynağını görüntüler. Her bir LED'in gösterdiği bilgi kaynakları şu şekildedir: (Bluetooth) **USB**(USB) **AUX1**(AUX1) **AUX2**(AUX2)
2	**Güç**	Sound Tower'ı açar ve kapatır.
3	**Şarj LED'i**	Sound Tower'ın pil seviyesi bilgilerini gösterir.
4	**BASS**	Bass modunu değiştirmek için **BASS** düğmesine basın.
5	**Bluetooth PAIRING**	Bluetooth Eşleştirme moduna girmek için düğmesini basılı tutun, LED'i mavi renkte yanıp söner.
6	**Kaynak**	Sound Tower'a bağlı bir kaynağı seçmek için basın.
7	**Işık**	**(Işık)** düğmesine basarsanız beyaz ışık yanıp söner, sonrasında düğmeyi döndürerek farklı Ruh Hâli ön ayarları arasında geçiş yapabilirsiniz. • Sıralama: Festival → Enerjik → Neşeli → Rahatlatıcı → Odak → Spor → Kapalı → Festival → Enerjik → ...

8	**Çal/Duraklat**	• **Çal/Duraklat** Parçayı geçici olarak duraklatmak için ▷II düğmesine basın. Düğmeye tekrar basarsanız parça çalınır. Çal/Duraklat düğmesine iki kez basarsanız sonraki parçaya geçilir. Öncekine geçmek için 3 kez basın.
9	**DJ**	Bu düğme bir sampler (DJ ses efekti) çalmanızı sağlar. Jog tekeri döndürüldükçe sampler (DJ ses efekti) değişir (12 sampler) • Sıralama: Havalı Korna → Islık → Kalabalık Tezahüratı → Yuhalama → Siren → Alkış → Geri Sarma → Cızırtı → "No Way!" → "Are you ready" → "3,2,1" → "Ok, Let's Go" → Havalı Korna → ... • Hangi sampler'ın seçildiğini bildirmek için her değişiklikte bir sampler çalınır

Sound Tower Arka Paneli

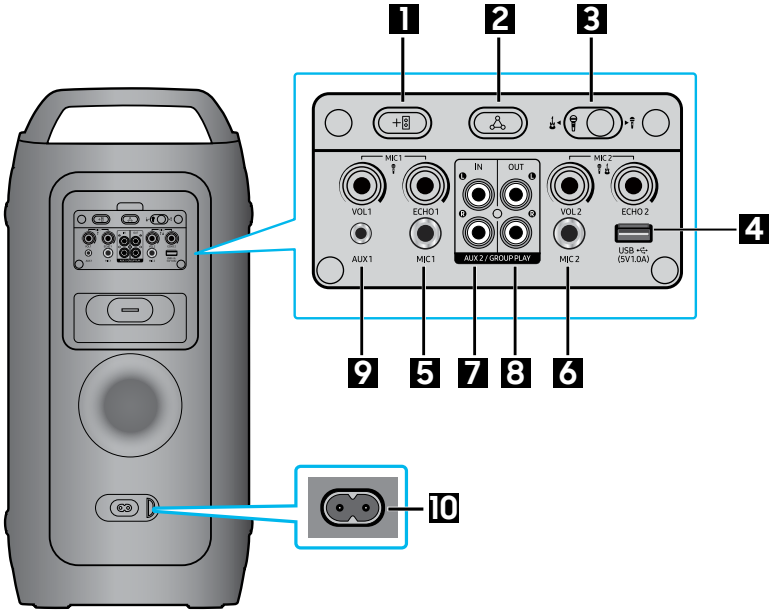

1	ADD STEREO	Başka bir Sound Tower modelini kablosuz olarak bağlamak için **ADD STEREO** düğmesine basın.
2	GROUP PLAY	On adede kadar Sound Tower sistemini kablosuz olarak bağlamak için **GROUP PLAY** düğmesine basın.
3	MIC2/GİTAR	Düğmeyi **MIC2** veya **GİTAR** giriş kaynağına getirin.
4	USB	Ana ünitedeki **USB** portlarına bir USB cihazı bağlayın. Cep telefonunuzu **USB** portuna takarak şarj edebilirsiniz. • **(Kaynak)** düğmesine basıp **USB** seçimini yapın.
5	MIC1	Mikrofonunuzu **MIC1** jakına takın.
6	MIC2	Mikrofonunuzu veya gitarınızı **MIC2** jakına takın.

7	**AUX2/GROUP PLAY IN Uçları**	Ana ünitedeki **AUX2 (IN)** uçlarını dış analog çıkış cihazındaki Ses Çıkışına bağlamak için Ses Kablosu (birlikte verilmez) kullanın. • Konnektör renklerini eşleştirdiğinizden emin olun. • Dış analog çıkış cihazının yalnızca bir Ses Çıkış jakı varsa sol veya sağa bağlayın. • **(Kaynak)** düğmesine basarak **AUX2**'yi seçin. • Ürün **AUX2** modunda iken 20 dakikadan daha uzun bir süre herhangi bir çalma ve komut girişi olmaz ise sistem kapanır. • Ürün **AUX2** modunda iken 8 saatten daha uzun bir süre çalma olur ve herhangi bir komut girişi olmaz ise sistem kapanır.
8	**GROUP PLAY OUT Uçları**	Ana ünitedeki **GROUP PLAY (OUT)** uçlarını dış analog çıkış cihazındaki Ses Girişine bağlamak için Ses Kablosu (birlikte verilmez) kullanın.
9	**AUX1**	Ana ünitedeki **AUX1** jakını dış cihazdaki Ses Çıkışına bağlamak için Ses (AUX) Kablosu (birlikte verilmez) kullanın. • Ürün **AUX1** modunda iken 20 dakikadan daha uzun bir süre herhangi bir çalma ve komut girişi olmaz ise sistem kapanır. • Ürün **AUX1** modunda iken 8 saatten daha uzun bir süre çalma olur ve herhangi bir komut girişi olmaz ise sistem kapanır.
10	**Güç**	Sound Tower'a elektrik gücü sağlamak için güç kablosunu **Güç** jakına, güç kablosunun diğer ucunu duvardaki prize takın.

Sound Tower'ın Şarj LED Durumu:

Şarj durumu	Şarj LED'i
Şarj olmuyor ve %100 ~ %31 güç	Yeşil
Şarj olmuyor ve %30 ~ %11 güç	Turuncu
Şarj olmuyor ve %10 ~ %5 güç	Kırmızı
Şarj oluyor ve tam şarj	Mavi
Şarj oluyor ve %99 ~ %31 güç	Yeşil Yanıp Sönme
Şarj oluyor ve %30 ~ %11 güç	Turuncu Yanıp Sönme
Şarj oluyor ve %10 ~ %5 güç	Kırmızı Yanıp Sönme

※ Pil %5 ise otomatik kapanır.
DC modda kapanırsa sistem gücünün tamamı kesilir.

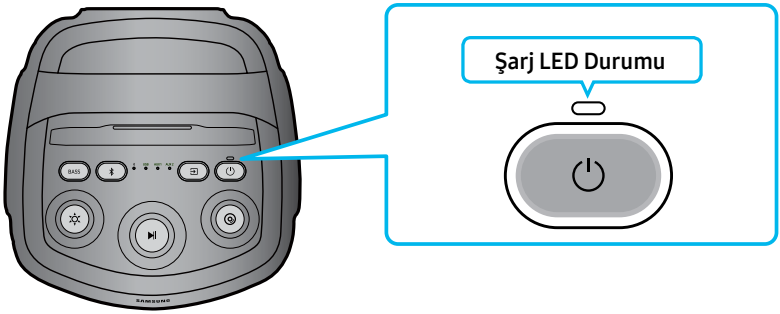

03 SOUND TOWER'I BAĞLAMA

Elektrik Gücünü Bağlama

Sound Tower'ı güç kablosu ile aşağıdaki sıralamaya göre elektrik prizine takın:
Güç kablosunu Sound Tower'a ve sonra duvardaki prize takın.
Aşağıdaki çizimlere bakın.

- **İlk kullanımdan önce pili uyandırmak için lütfen pili şarj edin.**
- AC kablosu takılırsa dâhilî pil tam şarj olana kadar otomatik olarak şarj edilir. Üst paneldeki LED gösterge mevcut şarj durumunu gösterir. (bkz. sayfa TUR - 6)
- Pille çalıştırmak için cihazın fişini çekerseniz ses seviyesi belirgin şekilde azalır.
- Gerekli elektrik gücü ve güç tüketimi hakkında daha fazla bilgi için ürüne yapıştırılan etikete bakın. (Etiket: Sound Tower'ın Arkasında)

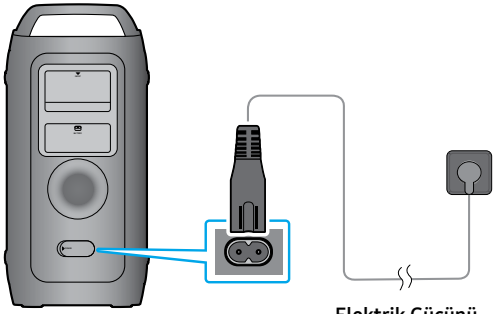

Ses Grubunun Kullanımı

Çok sayıda ses sistemini grup hâlinde bağlayarak parti ortamı yaratabilir ve daha yüksek ses çıkışı sağlayabilirsiniz. Sound Tower'lardan birini HOST olarak ayarlarsanız üzerinde çalınan parça Ses grubundaki diğer tüm Sound Tower sistemlerinde paylaşılır.

Kablolu Group Play modunu bağlama

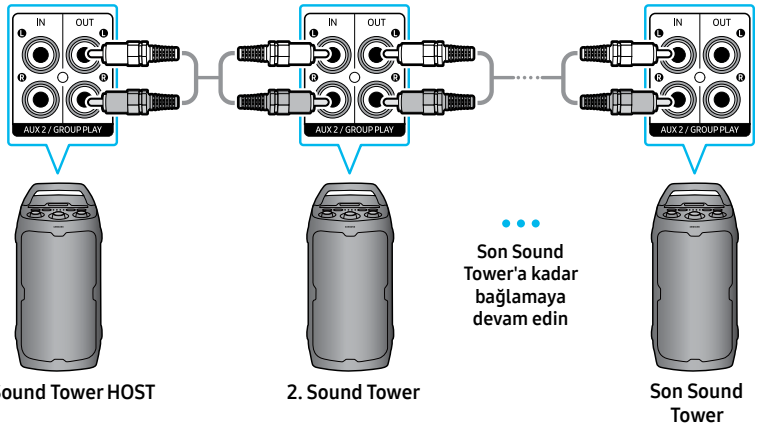

Tüm sistemleri ses kabloları (birlikte verilmez) ile bağlayarak Group Play kurulumu yapın. 1. (veya HOST) Sound Tower sistemi dışındaki her Sound Tower sisteminde kaynağı **AUX2** olarak değiştirmek için **(Kaynak)** düğmesini kullanın.
RCA kablosunu (birlikte verilmez) kullanarak RCA kablosunu gösterildiği gibi HOST üzerindeki **AUX2 OUT** portuna ve SUB üzerindeki **AUX2 IN** portuna takın.

NOTLAR

- 1. Sound Tower HOST her kaynaktan parça çalabilir.
- Kablo uzunluğu veya özelliklerine bağlı olarak çalışma mesafesinde farklılık olabilir.

Kablosuz Group Play modunu bağlama

Kablosuz Group Play modunu kullanmak için cihazın arkasındaki **Fiziksel Düğmeleri** veya **Samsung Sound Tower** app kullanabilirsiniz.

Kablosuz Group Play işlevi ile on adede kadar Sound Tower sistemi bağlayabilirsiniz.

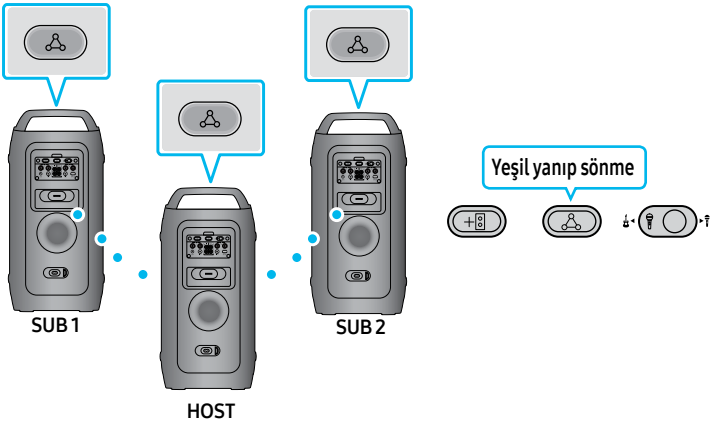

Fiziksel Düğmelerin Kullanımı:

1. **HOST** Sistemi bağlayın:

   HOST Sound Tower sistemindeki **GROUP PLAY** düğmesine basın.

   GROUP PLAY LED'i 10 saniye yavaşça yanıp söndükten sonra **GROUP PLAY** LED'i 30 saniye hızlıca yanıp söner.
2. Birinci Sub Sistemi (SUB 1) bağlayın:

   İkinci Sound Tower sistemindeki (SUB 1) **GROUP PLAY** düğmesine basın.

   GROUP PLAY LED'i yanıp sönmeye başlar.

   HOST sisteme bağlandıktan sonra SUB 1 üzerindeki **GROUP PLAY** LED'lerinin ikisi ve **HOST** yanıp sönmeyi bırakır ve sürekli yanar.
3. İkinci Sub Sistemi (SUB 2) bağlayın:

   Üçüncü Sound Tower sistemindeki (SUB 2) **GROUP PLAY** düğmesine basın.

   Sistemdeki **GROUP PLAY** düğmesinin yanıp sönmeyi bıraktığını bildiren bir sesli uyarı verilir.
4. Ek Sistemleri ekleyin:

   Daha fazla Sound Tower sistemi eklemek istiyorsanız her bir ek ünite için 3. adımı tekrarlayın.
5. Parça çalın:

   HOST Sound Tower sisteminde parça çalın.

   Tüm bağlı sistemlerden aynı anda ses çıkışı gerçekleşir.

Samsung Sound Tower App'in Kullanımı:

1. Akıllı telefonunuz veya tabletinizden Samsung Sound Tower app'i İndirin ve Açın.
2. Sound Tower'ı Bluetooth ile bağlayın.

3. Group Play ayarlarına gidin.

4. Kablosuz Group Play modunu açmak veya kapatmak için düğmeyi değiştirin.

Hangisinin HOST ve hangisinin SUB olduğunu anlama:

HOST - "Bluetooth Düğmesi ✱ LED Işığının Yandığını" ve Bluetooth küçük göstergesinin yandığını gösterir.
SUB - Yalnızca Bluetooth küçük göstergesinin yandığını gösterir. Bluetooth düğmesinde ✱ ışık yanmaz.

NOTLAR

- Group play modunda "HOST" Sound Tower, Samsung TV'ye bağlanabilir. Bağlantı başarılı olduktan sonra Group play modundan otomatik olarak çıkılır.
- Kablosuz Group Play bağlantısı MX-ST50F/MX-ST40F modellerinde kullanılabilir.
- Ortam koşulları veya bağlı cihazlarla ilgili diğer faktörler çalma kalitesini etkileyebilir.
- **GROUP PLAY** düğmesindeki kırmızı LED yanıyorsa kablosuz Group Play bağlantısında hata oluşmuştur. Kapatıp açmayı deneyin, daha sonra 1 ila 3. adımları uygulayın.
- SUB Sound Tower sistemlerindeki **ADD STEREO** düğmesi ve ✱ **PAIRING** düğmesi kablosuz Group Play modunda kullanılamaz.
- HOST Sound Tower sistemindeki **ADD STEREO** düğmesi kablosuz Group Play modunda kullanılamaz.
- Grup moduna "HOST" olarak girmek için Bluetooth Kaynağı durumundaki "**GROUP PLAY**" düğmesini basılı tutun. Tüm SUB üniteler birer birer bağlanmalıdır. Örneğin, HOST bağlandıktan sonra bağlamak için SUB 1'in üzerindeki **GROUP PLAY** düğmesine basın, SUB 1 bağlandıktan sonra SUB 2 ve SUB 3'ü de sırayla birer birer bağlamanız gerekir.
- Group Play modu kullanılırken mevcut bağlı Bluetooth cihazların bağlantısı kesilir ve Bluetooth bağlantısı devre dışı bırakılır.
- Bluetooth cihazlar yalnızca HOST Sound Tower'la arama yapıp bağlanabilir.
- Group Play modundayken SUB bir Bluetooth cihaza bağlanamaz.
- Group Play modundayken Sound Tower kapatılıp açılırsa veya bir SUB ünitede Bluetooth dışında bir kaynak seçilirse Group Play bağlantısı kesilir.

Kablosuz Group Play modu bağlantısını kesme

1. Group Play bağlandıktan sonra **GROUP PLAY** düğmesini (HOST veya SUB) 5 saniyeden uzun süre basılı tutun veya Group Play bağlanmadan önce **GROUP PLAY** düğmesine (HOST veya SUB) basın.
   - Onun yerine sesli uyarı verilir ve **GROUP PLAY** düğmesinin üzerindeki LED sönüktür.
2. SUB ünitelerde **Bluetooth** dışında kaynak seçerseniz veya HOST Sound Tower'ı kapatırsanız Group Play modu bağlantısı kesilir.
   - Bağlantı HOST Sound Tower'dan kesilirse Group Play bağlantısı kesilir.

Kablosuz Group Play bağlantıları

1. **Akıllı Telefona Bağlama:**
   - Akıllı telefonu Bluetooth ile HOST Sound Tower'a bağlayın, ardından diğer SUB Sound Tower'ları kablosuz Group play modunda HOST'a bağlayın.
     - Cihazdaki Çal/Duraklat, parça atlama, ses seviyesi artırma/azaltma düğmeleri yalnızca HOST Sound Tower'da çalışır.
     - SUB Sound Towers ses seviyesi cihaz üzerinden ayrı olarak ayarlanabilir.
2. **Mic/Gitar, USB, AUX bağlantısı:**
   - **Mic/Gitar:** MIC 1 veya MIC 2 üzerinden mikrofon veya Gitar bağlanır ve Group play LED'leri eşleştirilirse yalnızca bağlı Sound Tower'dan ses gelir.
   - **USB:** Kablosuz Stereo bağlantısı kalır ancak yalnızca USB'nin bağlı olduğu HOST Sound Tower'dan ses gelir.
   - **AUX:** AUX 1 üzerinden bağlandığında ve Kaynak AUX 1 üzerindeyken yalnızca HOST Sound Tower'dan ses gelir.

LED Göstergeler

LED	DURUM	Açıklama
Yeşil	Yanıp Sönme	Kablosuz Group Play bağlantısı bekleniyor.
	Sürekli	Kablosuz Group Play bağlantısı başarıyla kuruldu.
Kırmızı	Sürekli	Kablosuz Group Play bağlantısı kurulurken hata oluştu.

NOT

- Kablosuz bağlantıda Çalma kalitesi Bluetooth ortamına bağlı olarak dengesiz olabilir. Daha iyi çalma deneyimi için cihazı lütfen kablolu Group Play modunda tutun.
- Birinci Bluetooth bağlantısı 1 m mesafede kurulmalıdır.
- MAIN Sound Tower ile SUB Sound Tower arasındaki aydınlatma renkleri farklılık gösterebilir.

Kablosuz ADD Stereo Group modunun kullanımı

Kablosuz ADD Stereo modunu kullanmak için cihazın arkasındaki **Fiziksel Düğmeleri** veya **Samsung Sound Tower** app'i kullanabilirsiniz.

Stereo sesin keyfini çıkarmak için iki Sound Tower'ı bağlayıp Akıllı telefonunuz veya Samsung TV ile birlikte kullanın.

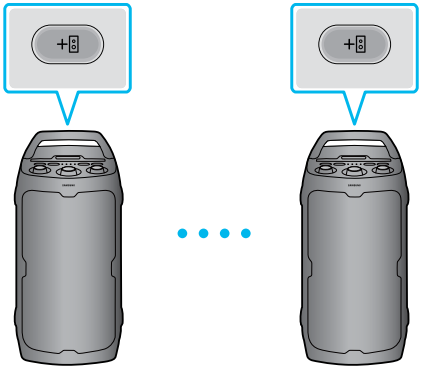

Soldaki Sound Tower (MAIN) **Sağdaki Sound Tower (SUB)**

Fiziksel Düğmelerin Kullanımı:

1. Soldaki Sound Tower sistemindeki **ADD STEREO** düğmesine basın. **ADD STEREO** düğmesindeki LED yanıp söner.
2. Sağdaki Sound Tower sistemindeki **ADD STEREO** düğmesine basın. **ADD STEREO** düğmesindeki LED yanıp söner.
3. Bağlantı kurulduğunda sesli uyarı verilir. Arka paneldeki ADD LED Yeşil Gösterge Sürekli yanar.
   - MAIN Sound Tower sisteminden sol kanal ses çıkışı, SUB Sound Tower sisteminden ise sağ kanal ses çıkışı gerçekleşir. Sound Tower'ın ses kanalını değiştirmek için MAIN veya SUB Sound Tower'daki **ADD STEREO** düğmesine basın.
4. Sound Tower'ların ikisinden de ses gelir.

Samsung Sound Tower App'in Kullanımı:

1. Akıllı telefonunuz veya tabletinizden Samsung Sound Tower app'i İndirin ve Açın.
2. Sound Tower'ı Bluetooth ile bağlayın.
3. Stereo ayarlarına gidin.
4. Kablosuz ADD Stereo'yu açmak veya kapatmak için düğmeyi değiştirin.

Hangisinin HOST ve hangisinin SUB olduğunu anlama:

HOST - "Bluetooth Düğmesi ✱ LED Işığının Yandığını" ve Bluetooth küçük göstergesinin yandığını gösterir.
SUB - Yalnızca Bluetooth küçük göstergesinin yandığını gösterir. Bluetooth düğmesinde ✱ ışık yanmaz.

NOTLAR

- Stereo Group modunun kullanılabilmesi için Sound Tower sistemlerinin ikisi de aynı model olmalıdır.
- Ortam koşulları veya bağlı cihazlarla ilgili diğer faktörler çalma kalitesini etkileyebilir.
- **ADD STEREO** düğmesindeki kırmızı LED yanıyorsa Stereo Group bağlantısında hata oluşmuştur. Sound Tower sistemlerinin ikisini de kapatın ve takılı ise fişlerini güç kaynağından çekin. Daha sonra açıp 1. Adımdan 3. Adıma kadar tekrar deneyin. Takılı değilse fişlerini yeniden takın. Sound Tower sistemlerinin ikisini de kapatın. Daha sonra açıp 1. Adımdan 3. Adıma kadar tekrar deneyin.
- SUB Sound Tower sistemlerindeki **Bluetooth PAIRING** ve **GROUP PLAY**, Stereo Group modunda devre dışıdır.
- MAIN Sound Tower sistemindeki **GROUP PLAY** düğmesi Stereo Group modunda kullanılamaz.
- ADD Stereo Akıllı telefona Bluetooth üzerinden kablosuz olarak bağlandığında: Cihazdaki Çal/Duraklat düğmesi yalnızca HOST Sound Tower ile çalışır, SUB Sound Tower ile çalışmaz.
- "**Bluetooth**" dışındaki modlarda (ör. **USB**, **AUX** modu), parça yalnızca MAIN Sound Tower'da çalınır, SUB Sound Tower'da çalınmaz.
- Stereo Group bağlanırken bir Bluetooth cihaz bağlamaya çalışırsanız Stereo Group modu başarısız olabilir.

Kablosuz Stereo bağlantısı:

1. **Akıllı Telefona Bağlama:**
   - Kablosuz Stereo aynı model Sound Tower'lara bağlanabilir.
   - Çal/Duraklat, parça atlama, önceki parça işlevleri HOST Sound Tower'da kullanılabilir.
   - SUB Sound Tower'da yalnızca Çal/Duraklat işlevi desteklenir.
2. **Mic/Gitar, USB, AUX bağlantısı:**
   - **Mic/Gitar:** Kablosuz Stereo bağlantısını gösteren sürekli yeşil ışık yanar fakat sadece Mic/Gitar bağlantısı olan üniteden ses gelir.
   - **USB:** Kablosuz Stereo bağlantısı kalır ancak yalnızca USB'nin bağlı olduğu HOST Sound Tower'dan ses gelir.
   - **AUX:** AUX 1 üzerinden bağlandığında ve Kaynak AUX 1 üzerindeyken yalnızca HOST Sound Tower'dan ses gelir. SUB Sound Tower üzerinden yalnızca ses seviyesi ayarlanabilir.

Stereo Group modunu sonlandırma

Stereo Group bağlıyken **ADD STEREO** düğmesini (MAIN veya SUB) en az 5 saniye basılı tutun.

- Sesli uyarı ve **ADD STEREO** düğmesinin üzerindeki LED kapalıdır.

LED Göstergeler

LED	DURUM	Açıklama
Yeşil	Yanıp Sönme	Stereo Group bağlantısı bekleniyor.
	Sürekli	Stereo Group bağlantısı başarıyla kuruldu.
Kırmızı	Sürekli	Stereo Group bağlantısı kurulurken hata oluştu.

04 DIŞ CİHAZ BAĞLAMA

Dış cihazdaki sesi Sound Tower'da çalmak için dış cihaza kablolu veya kablosuz ağ üzerinden bağlanın.

Analog Ses (AUX) Kablosu kullanarak bağlama

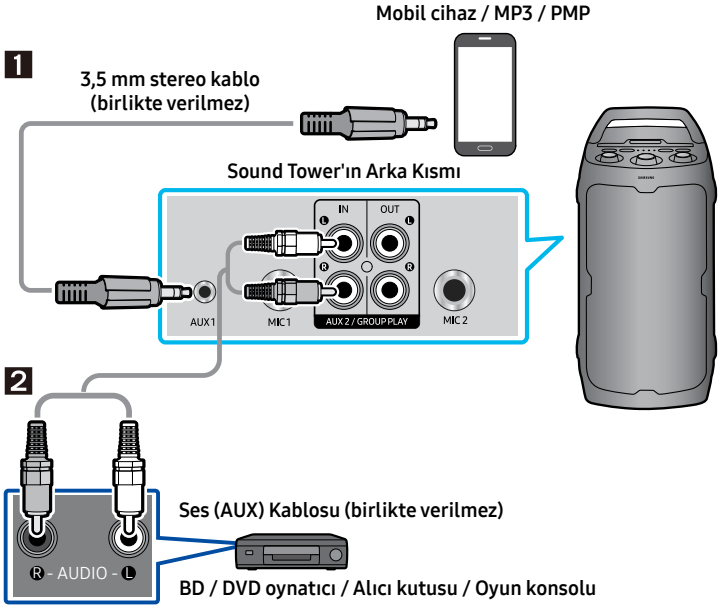

1 3,5 mm stereo Kablo (AUX1)

1. Ana ünitedeki **AUX1** jakını 3,5 mm stereo kablo ile Kaynak Cihazdaki AUDIO OUT jakına bağlayın.
2. Üst paneldeki **(Kaynak)** düğmesine basıp "**AUX1**" modunu seçin.

2 Ses Kablosu (AUX2)

1. Ana ünitedeki **AUX2 (IN)** uçlarını ses kablosu ile Kaynak Cihazdaki AUDIO OUT uçlarına bağlayın.
2. Üst paneldeki **(Kaynak)** düğmesine basıp "**AUX2**" modunu seçin.

Bluetooth ile mobil cihaz bağlama

Mobil cihazınızı Bluetooth ile bağlarsanız kablo bağlantısı derdi olmadan stereo ses alabilirsiniz.

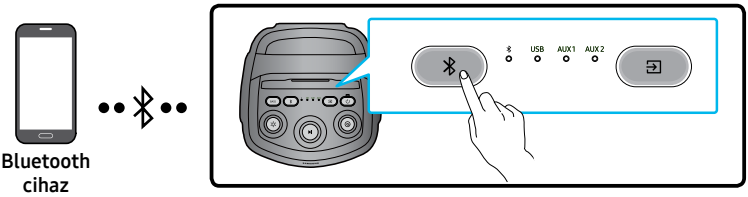

* Pil modunda, Sound Tower kapalıyken Bluetooth bağlantısı ve Sound Tower APP kullanılamaz.

İlk bağlantı

1. "**Bluetooth PAIRING**" moduna girmek için panelin üzerindeki **PAIRING** düğmesini 5 saniyeden uzun süre basılı tutun.
2. Cihazınızda gösterilen listeden "**[AV] Sound Tower 40F**" seçimini yapın.
   - Cihaz bağlandıktan sonra panelin üzerindeki Bluetooth ışığı sürekli yanar.
3. Bluetooth ile bağlı cihazdaki müzik dosyalarını Sound Tower'da çalın.

Cihaz bağlantısı başarısız olursa

- Sound Tower, Bluetooth bağlantısı kesildiğinde sesli uyarı verir.
- Listede daha önceden bağlanmış bir Sound Tower listesi (ör. "**[AV] Sound Tower 40F**") görünüyorsa bu listeyi silin.
- Daha sonra 1. ve 2. adımları tekrarlayın.

Bluetooth READY ile Bluetooth PAIRING arasındaki fark nedir?

- **Bluetooth READY**: Bu modda, daha önce bağladığınız TV veya mobil cihazı kullanarak Sound Tower'a bağlanabilirsiniz.
- **Bluetooth PAIRING**: Bu modda, Sound Tower'a yeni bir cihaz bağlayabilirsiniz. (**PAIRING** durumuna geçmek için paneldeki **PAIRING** düğmesini 5 saniyeden uzun süre basılı tutun.)

Çoklu Bluetooth bağlantısı

Sound Tower iki adede kadar eş zamanlı Bluetooth cihaz bağlantısını destekler. Sound Tower ikinci cihazın bağlantısı kesilmeden bağlı Bluetooth cihazların birinden parça çalabilir.

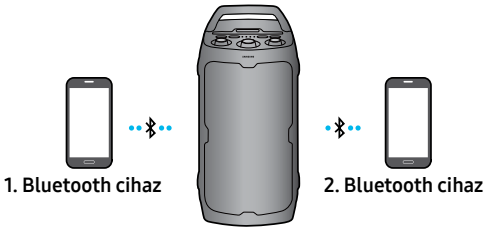

1. Sound Tower'ı ilk seferde sırasıyla birinci cihaza ve ikinci cihaza bağlayın. (Bkz. TUR - 15)
2. İki bağlı cihazın yalnız birinde parça çalınabilir, parça başka cihazda çalınırsa çalan cihazdaki parça duraklatılır.

NOTLAR

- Sound Tower'ı üçüncü bir cihaza bağlamak isterseniz Sound Tower'ın mevcut bağlı iki cihazdan biriyle olan bağlantısını kesip Sound Tower'ı üçüncü cihaza bağlayabilirsiniz. (Çoklu bağlantı özelliği Samsung TV'lerde kullanılamaz.)
- Sound Tower ve iki cihaz bağlı iken yeni bir Bluetooth cihazla eşleştirme yapılabilmesi için mevcut bağlı cihazların bağlantısı kesilmelidir.
- İki Bluetooth cihazı aynı anda bağlayabilirsiniz.
- Ortam koşulları veya bağlı cihazlarla ilgili diğer faktörler çalma kalitesini etkileyebilir.
- Sound Tower hazır durumda 18 dakika sonra hiçbir komut verilmezse otomatik olarak kapanır.
- Sound Tower aşağıdaki durumlarda Bluetooth araması veya düzgün bağlantı gerçekleştiremeyebilir:
  - Sound Tower'ın çevresinde güçlü elektriksel alan varsa.
  - Sound Tower ile çok sayıda Bluetooth cihaz aynı zamanda eşleştirilmişse.
  - Bluetooth cihazı kapatılırsa, yoksa ya da arızalıysa.
- Elektronik cihazlar radyo parazitine neden olabilir. Mikrodalga, kablosuz LAN cihazları gibi elektromanyetik dalga üreten cihazlar Sound Tower ana ünitesinden uzak tutulmalıdır.
- Çoklu Bluetooth bağlantısı bağlı cihazın teknik özelliklerine bağlı olarak desteklenmeyebilir.
- Akıllı telefon, dizüstü bilgisayar, TV gibi cihazlarda kullanılan Dongle, Adaptör gibi çıkarılabilir/tak-çıkar Bluetooth cihazlar çoklu Bluetooth bağlantısını desteklemeyebilir.

- Çoklu Bluetooth bağlantısı eşleştirme işleminden sonra Bluetooth cihazlara bağlı olarak parça çalmanın başlatılmasında hafif bir gecikme olabilir.
- Önce Bluetooth cihazınızın bağlantısını kesmeden Sound Tower menzilinden çok uzaklaşırsanız diğer Bluetooth cihazlara bağlanmak birkaç dakika sürebilir. Sound Tower'ı kapatıp açarak diğer Bluetooth cihazları beklemeden bağlayabilirsiniz.

LED Göstergeler

LED	DURUM	Açıklama
Mavi	Hızlı Yanıp Sönme	Bluetooth PAIRING modu
	Yanıp Sönme	Bluetooth READY modu
	Sürekli	Bluetooth cihaz bağlandı.

Bluetooth Gücü Açık Kullanma

Sound Tower kapalıyken açmak için akıllı telefonunuzu Bluetooth bağlantısı ile bağlayabilirsiniz. Pil durumu Bluetooth gücü açık kullanamaz.

1. Bluetooth Gücü Açık işlevini açık olarak ayarlamak için üst paneldeki **BASS** düğmesini basılı tutun. Aydınlatma çubuğu bir kez beyaz renkte yanıp söner.
   - Yalnızca Sound Tower güce takılıyken çalışır; Sound Tower fişe takılı değilken Bluetooth ile uyandırılamaz.
2. Sound Tower kapalıyken akıllı telefonunuzu Bluetooth ile bağlayın. (Bluetooth bağlantıları hakkında bilgi için akıllı cihazınızın kılavuzuna bakın.)
3. Bağlantı tamamlandıktan sonra Sound Tower kendisini otomatik olarak Bluetooth modunda açar.
   - Akıllı cihazınızdan çalmak istediğiniz parçayı seçin.

NOT

- Her seferinde **BASS** düğmesini 5 saniye basılı tutun. LED aydınlatma çubuğu bir kez beyaz renkte yanıp söner ve durum değişir:
  BLUETOOTH GÜCÜ AÇIK → BLUETOOTH GÜCÜ KAPALI

05 USB DEPOLAMA CİHAZI BAĞLAMA

USB depolama cihazındaki müzik dosyalarını Sound Tower'da çalabilirsiniz.

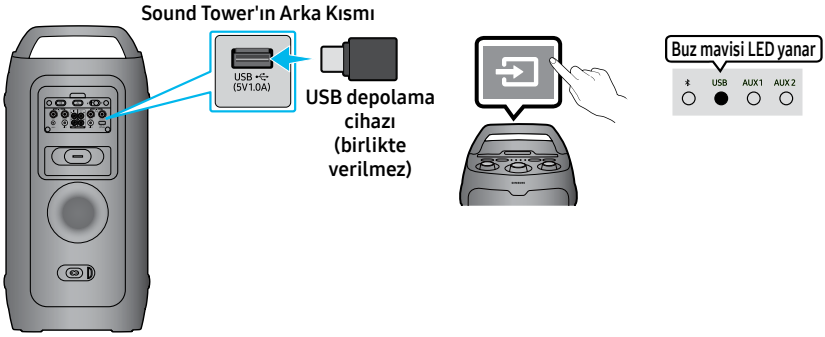

1. Sound Tower'ınızdaki USB portuna bir USB cihazı bağlayın.
2. Üst paneldeki **(Kaynak)** düğmesine basıp "**USB**" seçimini yapın.
3. Üst paneldeki ikinci **USB** göstergesi sürekli yanar.
4. USB depolama cihazındaki müzik dosyalarını Sound Tower'da çalın.
   - USB cihaz bağlanmazsa, çalma durdurulur veya 18 dakikadan uzun süre hiçbir giriş olmazsa Sound Tower otomatik olarak kapanır (Otomatik Güç Kapatma).
   - (Çal/Duraklat) düğmesine cihaz üzerinde iki kez basılırsa parça atlanır. Önceki parçaya geçmek için 3 kez basın.

NOTLAR

- Bu ürün yalnızca FAT ve FAT32 dosya sisteminde biçimlendirilen USB depolama cihazlarını destekler.
- Her bir USB depolama cihazında maksimum 2000 dosya çalınabilir.
- Her bir USB depolama cihazında maksimum 200 klasör okunabilir.

Desteklenen Ses Biçimleri

Uzantı	CODEC	Örnekleme Hızı	Bit hızı
*.mp3	MPEG 1 Layer 2	32 KHz ~ 48 KHz	32 Kbps ~ 320 Kbps
	MPEG 1 Layer 3	32 KHz ~ 48 KHz	32 Kbps ~ 320 Kbps
	MPEG 2 Layer 3	16 KHz ~ 24 KHz	8 Kbps ~ 160 Kbps
	MPEG 2.5 Layer 3	8 KHz ~ 12 KHz	8 Kbps ~ 160 Kbps
*.wav	LPCM	32 KHz ~ 192 KHz	1.024 Kbps ~ 9.216 Kbps
*.aac	AAC-LC (MPEG2/MPEG4)	32 KHz ~ 48 KHz	32 Kbps ~ 320 Kbps
*.flac	FLAC	32 KHz ~ 192 KHz	162 Kbps ~ 8.100 Kbps

NOTLAR

- Yukarıdaki tabloda desteklenen örnekleme hızları ve bit hızları gösterilmektedir. Desteklenmeyen biçimlerdeki dosyalar çalınmaz.
- 32 bit veri boyutu desteklenmez.

Yazılım Güncellemesi

Samsung gelecekte Sound Tower'ın aygıt yazılımı için güncellemeler sunabilir.

Güncelleme sunulduğunda içinde aygıt yazılımı güncellemesinin bulunduğu USB cihazı Sound Tower'ınızdaki **USB** portuna takarak aygıt yazılımını güncelleyebilirsiniz. Güncelleme dosyalarının nasıl indirileceği hakkında daha fazla bilgi için www.samsung.com → Support adresinden Samsung Electronics web sitesini ziyaret edin. Daha sonra Sound Tower'ınızın model numarasını girin veya seçin, Software & Apps seçimini yapın, ardından Downloads'u seçin. Opsiyon adlarının farklılık gösterebileceğini unutmayın.

Yükseltme 10 dakikadan uzun sürerse yükseltme işlemi takılmış demektir. Lütfen üst paneldeki Güç düğmesini 10 saniye basılı tutup 1 dakika bekleyin. Cihazı başlatmak için Güç düğmesine yeniden basın ve USB üzerinden yeniden yükseltme işlemini gerçekleştirin. Daha sonra yükseltme işleminin tamamlanmasını bekleyin. (Sıfırlama yükseltmesi yalnızca FAT biçimini destekler)

Yazılım yükseltmeleri APP kullanılarak da gerçekleştirilebilir.

Dış Mikrofon Bağlama

Normal fişli bir dinamik mikrofon (birlikte verilmez) bağlayarak sesinizi sistemden çıkarabilirsiniz.

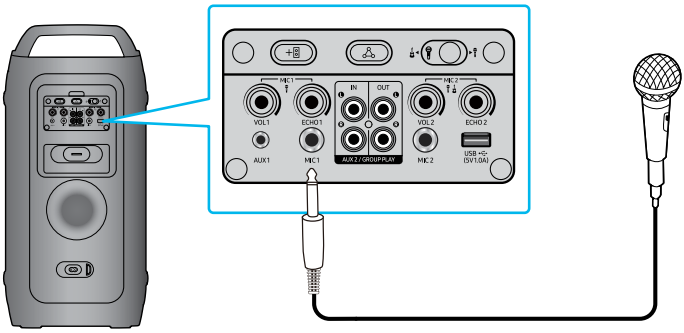

1. Mikrofon ses seviyesini düşürmek için MIC LEVEL düğmesini MIN ayarına çevirin.
2. Ünitedeki MIC jakına opsiyonel bir mikrofon bağlayın.
3. MIC "VOL" düğmesini kullanarak ses seviyesini ayarlayın.
4. MIC "ECHO" düğmesini kullanarak eko efektini ayarlayın.
5. Bağlı mikrofona doğru konuşun veya şarkı söyleyin.

NOTLAR

- Kablosuz Group Play veya Stereo modunu kullanırken Host veya Sub sisteme bağlı mikrofondan gelen ses yalnızca bağlı Sound Tower'dan gelir. Bunun aksine, Sub sistemlere bağlı mikrofonlar yalnızca kendi sistemlerinden duyulur.
- Sound Tower pil modundayken MIC ses seviyesi daha düşük olur.
- Anahtarı MIC 2 veya GİTAR giriş kaynağına getirin (Ses seviyesi Mikrofon kaynağına kıyasla daha düşüktür).

Dış Gitar Bağlama

Normal fişli bir Gitar (birlikte verilmez) bağlayarak sesinizi sistemden çıkarabilirsiniz.

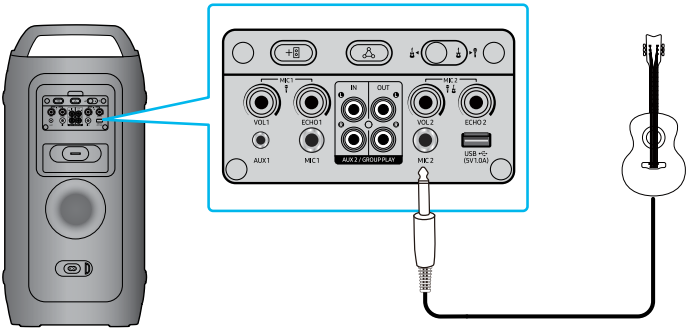

1. Gitar ses seviyesini düşürmek için MIC LEVEL düğmesini MIN ayarına çevirin.
2. Ünitedeki MIC 2 jakına opsiyonel bir Gitar bağlayın.
3. MIC 2 "VOL" düğmesini kullanarak ses seviyesini ayarlayın.
4. Bağlı gitar üzerinden çalın.

NOTLAR

- Kablosuz Group Play veya Stereo modunu kullanırken Host veya Sub sisteme bağlı gitardan gelen ses yalnızca bağlı Sound Tower'dan gelir. Bunun aksine, Sub sistemlere bağlı Gitar yalnızca kendi sistemlerinden duyulur.
- Sound Tower pil modundayken Gitar ses seviyesi daha düşük olur.

Ses Modunun Kullanımı

Sound Tower belirli müzik türleri için optimize edilmiş önceden tanımlı ekolayzer ayarları sunar.

1. APP üzerinden **SOUND MODE** düğmesine basın.
2. **SOUND MODE** seçimini her değiştirdiğinizde Sound Tower mevcut ses efektlerini döngü şeklinde değiştirir: **Standart, Geniş, Stadyum, Açık Hava**.

NOTLAR

- Varsayılan ses modu **Standart** moddur.
- Kapandıktan sonra varsayılan Ses Modu ayarında açmak için ürünün üzerindeki ▷II düğmesini 5 saniyeden uzun süre basılı tutun.

DJ Efektinin Kullanımı

DJ Efekti işlevi parçanıza DJ ses efektleri eklemenize imkân tanır. Her bir efektin seviyesi ayarlanabilir.

- Kullanıcılar APP üzerinden kaydırarak efekt ve değeri değiştirebilir; aralık 0 ile 3 şeklindedir.

NOT

- Kapandıktan sonra varsayılan DJ Efekti ayarında açmak için ürünün üzerindeki ▷II düğmesini 5 saniyeden uzun süre basılı tutun.

06 SAMSUNG SOUND TOWER APP'İN KULLANIMI

Samsung Sound Tower App'i Yükleme

Bu ürünü Akıllı Cihazınız ve Samsung Sound Tower app ile kontrol etmek için Google Play Store veya Apple App Store'dan Samsung Sound Tower App'i indirip Akıllı Cihazınıza yükleyin.

NOTLAR

- Samsung Sound Tower app, Android OS 6.0 veya daha yeni sürümleri çalıştıran Android mobil telefon cihazlarla uyumludur.
- Samsung Sound Tower app, iOS 13.0 veya daha yeni sürümleri çalıştıran Apple mobil telefon cihazlarla uyumludur.

Pazar araştırması: Samsung Sound Tower

GET IT ON Google Play

Download on the App Store

Samsung Sound Tower App'i Başlatma

Samsung Sound Tower app'i başlatmak ve kullanmak için akıllı cihazınızdaki Samsung Sound Tower simgesine dokunun ve ekrandaki talimatları izleyin.

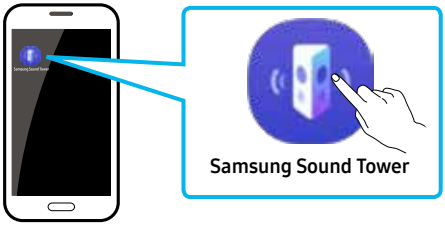

07 SORUN GİDERME

Yardım istemeden önce şunu kontrol edin.

Ünite açılmıyor.

→ Pil tamamen deşarj olmuş olabilir. Lütfen güç fişini takıp açmayı deneyin

Düğmeye basıldığında işlev çalışmıyor.

→ Güç fişini çektikten sonra Sound Tower'ı kapatın. Güç fişini tekrar takıp Sound Tower'ı açın.

→ Dış cihazı kapatıp yeniden açın ve tekrar deneyin.

→ Sinyal yoksa Sound Tower belirli bir süre sonra otomatik olarak kapanır. Gücü açın.

Bluetooth modunda ses düşmesi oluyor.

→ TUR - 15 sayfasındaki Bluetooth bağlantısı bölümlerine bakın.

Ses çıkmıyor.

Ses seviyesi minimum olarak mı ayarlanmış?

→ Ses seviyesini değiştirin.

Stereo Group bağlantısı çalışmıyor.

Sistem Kablosuz Group Play modunda mı?

→ Kablosuz Group Play modu bağlantısını kesip Stereo Group bağlantısını tekrar deneyin.

Bluetooth bağlantısı kurulamıyor.

Sistem kablosuz Group Play moduna veya Stereo Group modunda başka bir sisteme mi bağlı?

→ Kablosuz Group Play veya Stereo Group bağlantısını kestikten sonra Bluetooth bağlantısını tekrar deneyin.

İki Bluetooth cihaz zaten bağlı mı?

→ Diğer Bluetooth bağlantıları kestikten sonra Bluetooth bağlantısını tekrar deneyin.

PAIRING düğmesi çalışmıyor.

Sistem kablosuz Group Play veya Stereo Group modunda mı?

→ Kablosuz Group Play veya Stereo Group bağlantısını kestikten sonra tekrar deneyin.

HOST sistemi başka bir kablosuz Group Play veya Stereo Group bağlantısına geçirmek istiyorum.

→ Grup düğmesini 5 saniye basılı tutun, ardından diğerlerini birer birer bağlamak yerine Grup LED'ine bakarak durumu değerlendirin.

→ Stereo Group modunda HOST sabittir. Diğerlerini HOST olarak değiştiremezsiniz.

"Wireless/Wired Group/Add Stereo/ Bluetooth" bağlantısı yapılamıyor.

Sound Tower'ı kapatıp açarak test edin. Sound Tower'ı fabrika ayarlarına sıfırlayın. Sistemlerin arasındaki mesafe çok mu fazla?

→ "Wireless/Wired Group/Add Stereo/ Bluetooth" eşleştirme işleminin sistemden 1 metre mesafe içinde yapılması önerilir.

→ Sound Tower sistemleri arasındaki önerilen çalışma mesafesi 10 metreden azdır.

Sound Tower, Bluetooth ile uyandırmaya çalıştığımda açılmıyor.

→ Otomatik Bluetooth Açma özelliği yalnızca ünite güç kaynağına bağlıyken çalışır.

Müşteri Sıfırlama işlevi çalışmıyor.

→ Müşteri Sıfırlama işlevi DC Modda çalışmaz.
Müşteri Sıfırlama işlevini çalıştırmak için lütfen AC kabloyu takın.

08 LİSANS

Bluetooth® marka adı ve logoları Bluetooth SIG, Inc.'e ait tescilli ticari markalardır. Auracast™ marka adı ve logoları Bluetooth SIG'e ait ticari markalardır. Bu markaların Samsung Electronics Co., Ltd. tarafından tüm kullanımları lisans kapsamındadır. Diğer ticari markalar ve ticari adlar kendi sahiplerine aittir.
Auracast™ ile Group Play işlevi yalnızca ST40F ve ST50F için her bir Sound Tower'ı bağımsız olarak kontrol eder. Kablosuz bağlantıda çalma kalitesi Bluetooth® ortamlarına bağlı olarak dengesiz olabilir.

AB bekleme eko-tasarım düzenlemesiyle ilişkili kapalı mod, bekleme modu ve ağa bağlı bekleme modu hakkında daha fazla bilgi edinmek için lütfen www.samsung.com/global/ecodesign_energy adresini ziyaret edin.

Açık kaynak lisans bildirimi
Bu üründe kullanılan Açık Kaynak aşağıdaki web sayfasında bulunabilir (https://opensource.samsung.com).

09 HİZMET HAKKINDA ÖNEMLİ NOT

- Bu Kullanma Kılavuzundaki şekiller ve çizimler yalnızca referans amaçlı olarak verilmiştir ve gerçek ürün görünümünden farklı olabilir.
- Aşağıdaki durumlarda servis ücreti alınabilir
  (a) talebiniz üzerine bir mühendis geldiğinde ama üründe hiçbir arıza olmadığında (yani bu kullanım kılavuzunu okumadıysanız).
  (b) üniteyi bir onarım merkezine getirdiğinizde ama üründe hiçbir arıza olmadığında (yani bu kullanım kılavuzunu okumadıysanız).
- Evinize onarım için gelinmeden veya herhangi bir onarım yapılmadan önce servis ücreti size bildirilir.

10 TEKNİK ÖZELLİKLER VE KILAVUZ

Teknik Özellikler

Model Adı		MX-ST40F
USB		5 V/1,0 A
Ağırlık		12,73 kg
Boyutlar (G x Y x D)		303,0×620,0×310,0 mm
Çalışma Sıcaklığı Aralığı		+5 °C ile +35 °C
Çalışma Nemi Aralığı		%10 ~ %75
Genel Güç Tüketimi		40 W
AMFİ Maks Çıkış Gücü		Güç kablosu takılı 160 W
		Pil 80 W
Pil Türü		Lityum-iyon 33,48 Wh
Pil çalma süresi		12 saate kadar
Pil şarj süresi		< 3,5 saat
Lityum-iyon Şarj Edilebilir Pil	Pil Modeli	B3672CMS_FSC, 2INR22/71
	Nominal Gerilim	7,2 V ⎓
	Nominal Kapasite	4650 mAh, 33,48 Wh
	Sınırlı Şarj Gerilimi	8,3 V ⎓
	Genel Kapasite	4700 mAh, 33,84 Wh
Bekleme Durumunda Genel Güç Tüketimi (W)		2,0 W
Bluetooth Port devre dışı bırakma yöntemi		Bluetooth Güç işlevini kapatmak için **BASS** düğmesini 5 saniyeden uzun süre basılı tutun.

NOTLAR

- Samsung Electronics Co., Ltd teknik özellikleri haber vermeden değiştirme hakkını saklı tutar.
- Ağırlık ve boyut değerleri yaklaşık değerlerdir.
- Pil Çalma süresi ve Pil şarj süresi kullanım koşullarına bağlı olarak farklılık gösterebilir.
- Aşırı soğuk veya sıcak ortamlarda güvenlik nedeniyle şarj işlemi durur. Bu sorunları gidermek için AC güç kablosunu fişten çekip çalışma sıcaklığı 5 °C ile 35 °C aralığında olduğunda tekrar takın.
- Samsung olarak bu radyo ekipmanının 2014/53/EU Direktifine ve ilgili Birleşik Krallık yasal gerekliliklerine uygun olduğunu beyan ederiz. Uygunluk beyanının tam metnine şu internet adresinden ulaşabilirsiniz: http://www.samsung.com. Buradan Support sayfasına gidip model adını girin. Bu ekipman tüm AB ülkelerinde ve Birleşik Krallık'ta çalıştırılabilir.

- **KABLOSUZ CİHAZ ÇIKIŞ GÜCÜ**
  Bluetooth maks verici gücü
  100 mW: 2,4 GHz – 2,4835 GHz

[Bu üründeki pillerin doğru atılması]

(Ayrı toplama sistemlerine sahip ülkeler içindir)
Pildeki, kılavuzdaki veya ambalajdaki bu işaret bu üründeki pillerin kullanım ömürlerinin sonunda diğer ev atıkları ile birlikte atılmaması gerektiğini belirtir. Hg, Cd veya Pb kimyasal sembolleri pilin EC Yönetmeliği 2006/66'da belirtilen referans değerlerin üstünde cıva, kadmiyum veya kurşun içerdiğini gösterir.
Piller düzgün atılmazsa, bu maddeler insan sağlığına veya ortama zarar verebilir.
Doğal kaynakları korumak ve malzemelerin yeniden kullanılmasını özendirmek için pilleri diğer atık türlerinden ayırıp bölgenizdeki ücretsiz pil iade sistemiyle geri dönüştürülmesini sağlayın.

Bu Ürünün Doğru Şekilde Atılması
(Atık Elektrikli ve Elektronik Cihazlar)

(Ayrı toplama sistemlerine sahip ülkeler içindir)
Ürünün, aksesuarların veya ilgili belgelerin üzerinde bulunan bu işaret, ürünün ve elektronik aksesuarlarının (örn. şarj cihazı, kulaklık, USB kablo) kullanım ömrü sonunda diğer ev atıklarıyla birlikte atılmaması gerektiğini belirtir. Atıkların kontrolsüz olarak imha edilmesinin çevre ve insan sağlığı üzerindeki zararlı etkisini engellemek için lütfen bunu diğer atık türlerinden ayırın ve malzeme kaynaklarının sürdürülebilir şekilde yeniden kullanılabilmesi için geri dönüştürülmesini sağlayın. Ev kullanıcıları, bu ürünü çevresel açıdan güvenli bir geri dönüştürme işlemi için nereye ve nasıl ulaştıracakları hakkında ayrıntılı bilgi için ürünü satın aldıkları bayi ile veya yerel resmi makamla irtibat kurmalıdır.
İş kullanıcıları tedarikçileri ile irtibat kurup satın alma sözleşmesinin hüküm ve koşullarına bakmalıdır. Bu ürün ve ürünün elektronik aksesuarları, imha için diğer ticari atıklarla karıştırılmamalıdır.

Samsung'un çevre taahhütleri ve REACH, WEEE, Piller gibi ürüne özgü düzenleme zorunlulukları hakkında bilgi için şu adresi ziyaret edin:
www.samsung.com/uk/aboutsamsung/sustainability/environment/our-commitment/data/

SAMSUNG

İthalatçı Firma

SAMSUNG

SAMSUNG Electronics İstanbul Pazarlama ve Ticaret LTD. ŞTİ
Flatofis İstanbul İş Merkezi, Otakçılar Cad. Bina
No: 78, Kat:3, No: B3, 34050, Eyüp, İstanbul / Türkiye
Tel: (0212) 467 06 00

Bu ürünün ortalama yaşam süresi 10 yıldır

İmalatçı	: (Maetan dong) 129, Samsung-ro, Yeongtong-Gu, Suwon Si. Gyeonggi-Do 16677 Korea
L V D	: Korea Testing Laboratory (KTL) 87, Digital-ro 26-gil, Guro-gu, Seoul, 08389, KOREA, REPUBLIC OF Tel : +82 2 8601 114 / Fax : +82 2 8601 285
E M C	: SEC EMC Laboratory (Maetan dong) 129, Samsung-ro, Yeongtong-Gu, Suwon Si. Gyeonggi-Do 16677 Korea CTK Co.,Ltd. (Ho-dong), 113, Yejik-ro, Cheoin-gu, Yongin-si, Gyeonggi-do, Korea

© 2025 Samsung Electronics Co., Ltd. All rights reserved.

Contact Samsung world wide

If you have any questions or comments relating to Samsung products, please contact the Samsung customer care Centre.

Samsung Service Centre ☎	Web Site
444 77 11	www.samsung.com/tr/support

AEEE Yönetmeliğine
Uygundur

CE